

# INSTALLATION INSTRUCTIONS FOR

## \*M9S80 & \*C9S80\*

### GAS FURNACE

### CATEGORY I

### CATÉGORIE I

These furnaces comply with requirements embodied in the American National Standard / National Standard of Canada ANSI Z21.47-CSA-2.3 Gas Fired Central Furnaces.



*Installer:*  
Affix all manuals  
adjacent to the unit.



**RECOGNIZE THIS SYMBOL  
AS A SAFETY PRECAUTION.**

As a professional installer you have an obligation to know the product better than the customer. This includes all safety precautions and related items.

Prior to actual installation, thoroughly familiarize yourself with this Instruction Manual. Pay special attention to all safety warnings. Often during installation or repair it is possible to place yourself in a position which is more hazardous than when the unit is in operation.

Remember, it is your responsibility to install the product safely and to know it well enough to be able to instruct a customer in its safe use.

Safety is a matter of common sense...a matter of thinking before acting. Most dealers have a list of specific good safety practices...follow them.

The precautions listed in this Installation Manual are intended as supplemental to existing practices. However, if there is a direct conflict between existing practices and the content of this manual, the precautions listed herein take precedence.

**\*NOTE:** Please contact your distributor or our website for the applicable Specification Sheet referred to in this manual.

## TABLE OF CONTENTS


|   |    |
|---|----|
| SAFETY CONSIDERATIONS .....                                 | 2  |
| PRODUCT APPLICATION .....                                   | 4  |
| LOCATION REQUIREMENTS & CONSIDERATIONS .....                | 5  |
| COMBUSTION & VENTILATION AIR REQUIREMENTS .....             | 8  |
| MASONRY CHIMNEYS .....                                      | 10 |
| ELECTRICAL CONNECTIONS .....                                | 10 |
| GAS SUPPLY AND PIPING .....                                 | 11 |
| CIRCULATING AIR .....                                       | 14 |
| ELECTRICAL .....  | 16 |
| AIRFLOW TABLES .....  | 21 |
| STATUS CODES .....  | 29 |
| TROUBLESHOOTING CODES .....                                 | 31 |
| WIRING DIAGRAM .....  | 33 |
| MAINTENANCE .....   | 34 |
| MEDIA AIR FILTER OR ELECTRONIC AIR<br>CLEANER REMOVAL ..... | 34 |
| BEFORE LEAVING AN INSTALLATION .....                        | 35 |
| REPAIR AND REPLACEMENT PARTS .....                          | 35 |



### WARNING

Only personnel that have been trained to install, adjust, service or repair(hereinafter, "service") the equipment specified in this manual should service the equipment. The manufacturer will not be responsible for any injury or property damage arising from improper service or service procedures. If you service this unit, you assume responsibility for any injury or property damage which may result. In addition, in jurisdictions that require one or more licenses to service the equipment specified in this manual, only licensed personnel should service the equipment. Improper installation, adjustment, servicing or repair of the equipment specified in this manual, or attempting to install, adjust, service or repair the equipment specified in this manual without proper training may result in product damage, property damage, personal injury or death.

## 80% HEX

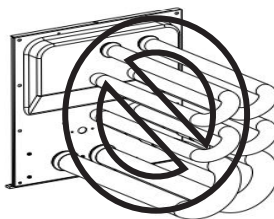

**DO NOT LIFT  
PRODUCT USING  
HEAT EXCHANGER**



## SAFETY CONSIDERATIONS

Adhere to the following warnings and cautions when installing, adjusting, altering, servicing, or operating the furnace. To ensure proper installation and operation, thoroughly read this manual for specifics pertaining to the installation and application of this product.



### WARNING

#### FIRE OR EXPLOSION HAZARD

Failure to follow the safety warnings exactly could result in serious injury, death or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.



### AVERTISSEMENT

#### RISQUE D'INCENDIE OU D'EXPLOSION

Si les consignes de sécurité ne sont pas suivies à la lettre, cela peut entraîner la mort, de graves blessures ou des dommages matériels.

Ne jamais vérifier la présence de fuites de gaz au moyen d'une flamme nue. Vérifier tous les raccords en utilisant une solution savonneuse commerciale conçue spécialement pour la détection de fuites. Un incendie ou une explosion risque de se produire, ce qui peut entraîner la mort, des blessures ou des dommages matériels.

This furnace is manufactured for use with natural gas. It may be field converted to operate on L.P. gas by using the appropriate L.P. conversion kit listed in the **PROPANE GAS/ HIGH ALTITUDE INSTALLATIONS** section of this manual. Install this furnace only in a location and position as specified in **LOCATION REQUIREMENTS & CONSIDERATIONS** section and **INSTALLATION POSITIONS** section of this manual.

Provide adequate combustion and ventilation air to the furnace as specified in **COMBUSTION & VENTILATION AIR REQUIREMENTS** section of this manual.

Combustion products must be discharged to the outdoors. Connect this furnace to an approved vent system only, as specified in **Category 1 Venting** section of this manual.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections, as specified in **GAS SUPPLY AND PIPING** section of this manual.

Always install a furnace to operate within the furnace's intended temperature-rise range with a duct system which has external static pressure within the allowable range, as specified on the furnace rating plate and **OPERATIONAL CHECKS** section of these instructions.

When furnace duct(s) supply air outside the space containing the furnace, a return air duct must terminate in the same space as the supply duct and be sealed to the furnace casing. A gas-fired furnace for installation in a residential garage must be installed as specified in the **LOCATION REQUIREMENTS AND CONSIDERATIONS** section of this manual.

This furnace may be used as a construction site heater only if certain conditions are met. These conditions are listed in the **PRODUCT APPLICATION** section of this manual.



### WARNING

TO PREVENT PERSONAL INJURY OR DEATH DUE TO IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE, OR MAINTENANCE, REFER TO THIS MANUAL. FOR ADDITIONAL ASSISTANCE OR INFORMATION, CONSULT A QUALIFIED INSTALLER, SERVICER AGENCY OR THE GAS SUPPLIER.



### WARNING

IF THE INFORMATION IN THESE INSTRUCTIONS IS NOT FOLLOWED EXACTLY, A FIRE OR EXPLOSION MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.


- DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUID IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.
- WHAT TO DO IF YOU SMELL GAS:
  - DO NOT TRY TO LIGHT ANY APPLIANCE.
  - DO NOT TOUCH ANY ELECTRICAL SWITCH; DO NOT USE ANY PHONE IN YOUR BUILDING.
  - IMMEDIATELY CALL YOUR GAS SUPPLIER FROM A NEIGHBOR'S PHONE. FOLLOW THE GAS SUPPLIER'S INSTRUCTIONS. IF YOU CAN NOT REACH YOUR GAS SUPPLIER, CALL THE FIRE DEPARTMENT.
- INSTALLATION AND SERVICE MUST BE PERFORMED BY A QUALIFIED INSTALLER, SERVICE AGENCY OR THE GAS SUPPLIER.



### WARNING

THIS PRODUCT CONTAINS OR PRODUCES A CHEMICAL OR CHEMICALS WHICH MAY CAUSE SERIOUS ILLNESS OR DEATH AND WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS OR OTHER REPRODUCTIVE HARMS.

**DANGER**



**CARBON MONOXIDE POISONING HAZARD**


Special Warning for Installation of Furnace or Air Handling Units in Enclosed Areas such as Garages, Utility Rooms or Parking Areas

Carbon monoxide producing devices (such as an automobile, space heater, gas water heater, etc.) should not be operated in enclosed areas such as unventilated garages, utility rooms or parking areas because of the danger of carbon monoxide (CO) poisoning resulting from the exhaust emissions. If a furnace or air handler is installed in an enclosed area such as a garage, utility room or parking area and a carbon monoxide producing device is operated therein, there must be adequate, direct outside ventilation.

This ventilation is necessary to avoid the danger of CO poisoning which can occur if a carbon monoxide producing device continues to operate in the enclosed area. Carbon monoxide emissions can be (re)circulated throughout the structure if the furnace or air handler is operating in any mode.

CO can cause serious illness including permanent brain damage or death. 810259-216

**DANGER**  
**PELIGRO**



**RIESGO DE INTOXICACIÓN POR MONÓXIDO DE CARBONO**


Advertencia especial para la instalación de calentadores ó manejadoras de aire en áreas cerradas como estacionamientos ó cuartos de servicio.

Los equipos ó aparatos que producen monóxido de carbono (tal como automóvil, calentador de gas, calentador de agua por medio de gas, etc) no deben ser operados en áreas cerradas debido al riesgo de envenenamiento por monóxido de carbono (CO) que resulta de las emisiones de gases de combustión. Si el equipo ó aparato se opera en dichas áreas, debe existir una adecuada ventilación directa al exterior. Esta ventilación es necesaria para evitar el peligro de envenenamiento por CO, que puede ocurrir si un dispositivo que produce monóxido de carbono sigue operando en el lugar cerrado.

Las emisiones de monóxido de carbono pueden circular a través del aparato cuando se opera en cualquier modo.

El monóxido de carbono puede causar enfermedades severas como daño cerebral permanente ó muerte. 810259-216

**DANGER**



**RISQUE D'EMPOISONNEMENT AU MONOXYDE DE CARBONE**

Advertencia especial para la instalación de calentadores ó manejadoras de aire en áreas cerradas como estacionamientos ó cuartos de servicio.

Avertissement special au sujet de l'installation d'appareils de chauffage ou de traitement d'air dans des endroits clos, tels les garages, les locaux d'entretien et les stationnements. Evitez de mettre en marche les appareils produisant du monoxyde de carbone (tels que les automobile, les appareils de chauffage autonome, etc.) dans des endroits non ventilés tels que les d'empoisonnement au monoxyde de carbone. Si vous devez faire fonctionner ces appareils dans un endroit clos, assurez-vous qu'il y ait une ventilation directe provenant de l'exterieur.

Cette ventilation est nécessaire pour éviter le danger d'intoxication au CO pouvant survenir si un appareil produisant du monoxyde de carbone continue de fonctionner au sein de la zone confinée.

Les émissions de monoxyde de carbone peuvent étre redicrles dans les endroits clos, si l'appareil de chauffage ou de traitement d'air sont en marche.

Le monoxyde de carbone peut causer des maladies graves telles que des dommages permanents au cerveau et meme la mort. 810259-216

**WARNING**

HEATING UNIT SHOULD NOT BE UTILIZED WITHOUT REASONABLE ROUTINE, INSPECTION, MAINTENANCE AND SUPERVISION. IF THE BUILDING IN WHICH ANY SUCH DEVICE IS ROUTINELY INSPECTED, MAINTAINED AND MONITORED. IN THE EVENT THAT THE BUILDING MAY BE EXPOSED TO FREEZING TEMPERATURES AND WILL BE VACANT, ALL WATER-BEARING PIPES SHOULD BE DRAINED. THE BUILDING SHOULD BE PROPERLY WINTERIZED AND THE WATER SOURCE CLOSED. IN THE EVENT THAT THE BUILDING MAY BE EXPOSED TO FREEZING TEMPERATURES AND WILL BE VACANT, ANY HYDRONIC COIL UNITS SHOULD BE DRAINED AS WELL AND, IN SUCH CASE, ALTERNATIVE HEAT SOURCES SHOULD BE UTILIZED.

**WARNING**

TO PREVENT PERSONAL INJURY OR DEATH DUE TO IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE, REFER TO THIS MANUAL. FOR ADDITIONAL ASSISTANCE OR INFORMATION, CONSULT A QUALIFIED INSTALLER, SERVICER AGENCY OR THE GAS SUPPLIER.

**WARNING**

TO PREVENT PERSONAL INJURY OR DEATH DUE TO ASPHYXIATION, THIS FURNACE MUST BE CATEGORY I VENTED. DO NOT VENT USING CATEGORY III VENTING.

PROVISIONS MUST BE MADE FOR VENTING COMBUSTION PRODUCTS OUTDOORS THROUGH A PROPER VENTING SYSTEM. THIS LENGTH OF FLUE PIPE COULD BE A LIMITING FACTOR IN LOCATING THE FURNACE.

**WARNING**

TO PREVENT POSSIBLE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH DUE TO ELECTRICAL SHOCK, THE FURNACE MUST BE LOCATED TO PROTECT THE ELECTRICAL COMPONENTS FROM WATER.

#### ADDITIONAL SAFETY CONSIDERATIONS

- This furnace is approved for Category I Venting only.
- Provisions must be made for venting combustion products outdoors through a proper venting system. The length of flue pipe could be a limiting factor in locating the furnace.

#### SHIPPING INSPECTION

All units are securely packed in shipping containers tested according to International Safe Transit Association specifications. The carton must be checked upon arrival for external damage. If damage is found, a request for inspection by carrier's agent must be made in writing immediately.

The furnace must be carefully inspected on arrival for damage and bolts or screws which may have come loose in transit. In the event of damage the consignee should:

1. Make a notation on delivery receipt of any visible damage to shipment or container.
2. Notify carrier promptly and request an inspection.

**WARNING**

SHOULD OVERHEATING OCCUR OR THE GAS SUPPLY FAIL TO SHUT OFF, TURN OFF THE MANUAL GAS SHUTOFF VALVE EXTERNAL TO THE FURNACE BEFORE TURNING OFF THE ELECTRICAL SUPPLY.

**WARNING**

POSSIBLE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH DUE TO FIRE, EXPLOSION, SMOKE, SOOT, CONDENSATION, ELECTRICAL SHOCK, OR CARBON MONOXIDE MAY RESULT FROM IMPROPER INSTALLATION, REPAIR OPERATION, OR MAINTENANCE OF THIS PRODUCT.

3. With concealed damage, carrier must be notified as soon as possible - preferably within five days.
4. File the claim with the following support documents within a nine month statute of limitations.
  - Original or certified copy of the Bill of Lading, or indemnity bond.
  - Original paid freight bill or indemnity in lieu thereof.
  - Original or certified copy of the invoice, showing trade and other discounts or reductions.
  - Copy of the inspection report issued by carrier's representative at the time damage is reported to carrier.

The carrier is responsible for making prompt inspection of damage and for a thorough investigation of each claim. The distributor or manufacturer will not accept claims from dealers for transportation damage.

**Keep this literature in a safe place for future reference.**

### ELECTROSTATIC DISCHARGE (ESD) PRECAUTIONS

**NOTE:** Discharge body's static electricity before touching unit. An electrostatic discharge can adversely affect electrical components.

Use the following precautions during furnace installation and servicing to protect the integrated control module from damage. By putting the furnace, the control, and the person at the same electrostatic potential, these steps will help avoid exposing the integrated control module to electrostatic discharge. This procedure is applicable to both installed and non-installed (ungrounded) furnaces.

1. Disconnect all power to the furnace. Do not touch the integrated control module or any wire connected to the control prior to discharging your body's electrostatic charge to ground.
2. Firmly touch a clean, unpainted, metal surface of the furnaces near the control. Any tools held in a person's hand during grounding will be discharged.
3. Service integrated control module or connecting wiring following the discharge process in step 2. Use caution not to recharge your body with static electricity; (i.e., do not move or shuffle your feet, do not touch ungrounded objects, etc.). If you come in contact with an ungrounded object, repeat step 2 before touching control or wires.
4. Discharge your body to ground before removing a new control from its container. Follow steps 1 through 3 if installing the control on a furnace. Return any old or new controls to their containers before touching any ungrounded object.

### TO THE INSTALLER

Before installing this unit, please read this manual thoroughly to familiarize yourself with specific items which must be adhered to, including but not limited to: unit maximum external static pressure, gas pressures, BTU input rating, proper electrical connections, circulating air temperature rise, minimum or maximum CFM, and motor speed connections, and venting. These furnaces are designed for Category I venting only.



### WARNING

**TO PREVENT PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH DUE TO FIRE, DO NOT INSTALL THIS FURNACE IN A MOBILE HOME, TRAILER, OR RECREATIONAL VEHICLE.**

### PRODUCT APPLICATION

This furnace is primarily designed for residential home-heating applications. It is NOT designed or certified for use in mobile homes, trailers or recreational vehicles. Neither is it designed or certified for outdoor applications. The furnace **must** be installed indoors (i.e., attic space, crawl space, or garage area provided the garage area is enclosed with an operating door).

This furnace can be used in the following non-industrial commercial applications:

**Schools, Office Buildings, Churches, Retail Stores, Nursing Homes, Hotels/Motels, Common or Office Areas**

In such applications, the furnace must be installed with the following stipulations:

- It must be installed per the installation instructions provided and per local and national codes.
- It must be installed indoors in a building constructed on site.
- It must be part of a ducted system and not used in a free air delivery application.
- It must not be used as a "make-up" air unit.
- All other warranty exclusions and restrictions apply.

This furnace may be used as a construction site heater **ONLY** if all of the following conditions are met:

- The vent system is permanently installed per these installation instructions.
- A room thermostat is used to control the furnace. Fixed jumpers that provide continuous heating CANNOT be used and can cause long term equipment damage. Bi-metal thermostats, or any thermostat affected by vibration must not be used during construction.
- Return air ducts are provided and sealed to the furnace.
- A return air temperature range between 60°F (16°C) and 80°F (27°C) is maintained.
- Air filters are installed in the system and replaced daily during construction and upon completion of construction.
- The input rate and temperature rise are set per the furnace rating plate.
- 100% outside air must be used for combustion during construction. Temporary ducting may be used to supply outside air to the furnace for combustion – do not connect this duct directly to the furnace. Size this duct according to NFPA 54/ANSI Z223.1 section for Combustion and Ventilation Air.



- The furnace heat exchanger, components, duct system, air filters and evaporator coils are thoroughly cleaned following final construction clean up by a qualified person.
- All furnace operating conditions (including ignition, input rate, temperature rise and venting) are verified by a qualified person according to these installation instructions.
- Furnace doors must be in place on the furnace while the furnace is operating in any mode.
- Damage or repairs due to failure to comply with these requirements are not covered under the warranty.

**NOTE:** The Commonwealth of Massachusetts requires that the following additional requirements must also be met:

- Gas furnaces must be installed by a licensed plumber or gas fitter.
- A T-handle gas cock must be used.
- If the unit is to be installed in an attic, the passageway to and the service area around the unit must have flooring.

|  |
|--|
|  <b>WARNING</b>   |
| <p><b>TO PREVENT PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH DUE TO FIRE, DO NOT INSTALL THIS FURNACE IN A MOBILE HOME, TRAILER, OR RECREATIONAL VEHICLE.</b></p> |

To ensure proper furnace operation, install, operate and maintain the furnace in accordance with these installation and operation instructions, all local building codes and ordinances. In their absence, follow the latest edition of the National Fuel Gas Code (NFPA 54/ANSI Z223.1) and/or local plumbing or waste water codes, and other applicable codes.

A copy of the National Fuel Gas Code (NFPA 54/ANSI Z223.1) can be obtained from any of the following:

**American National Standards Institute**  
25 West 43rd Street, 4th Floor  
New York, NY 10036

**National Fire Protection Association**  
1 Batterymarch Park  
Quincy, MA 02169-7471

**CSA International**  
8501 East Pleasant Valley  
Independence, OH 44131

The rated heating capacity of the furnace should be greater than or equal to the total heat loss of the area to be heated. The total heat loss should be calculated by an approved method or in accordance with "ASHRAE Guide" or "Manual J-Load Calculations" published by the Air Conditioning Contractors of America.

In the USA, this furnace MUST be installed in accordance with the latest edition of the ANSI Z223.1 booklet entitled "National Fuel Gas Code" (NFPA 54), and the requirements or codes of the local utility or other authority having jurisdiction. Additional helpful publications available from the NFPA are, NFPA 90A - Installation of Air Conditioning and Ventilating System and NFPA 90B - Warm Air Heating and Air Conditioning System.

All venting shall be in accordance with the National Fuel Gas Code, ANSI Z223.1, or applicable local building and/or air conditioning codes.

**NOTE:** Furnaces with NOx screens meet the California NOx emission standards and California seasonal efficiency standards. ANNUAL inspections of the furnace and its vent system is strongly recommended.

## LOCATION REQUIREMENTS AND CONSIDERATIONS

Your unit model type determines which installation procedures must be used. For \*M9S80 models, you must follow instructions for Horizontal Left, Horizontal Right or Upflow installations only. These furnaces are not approved for Downflow installations.

\*C9S80 models may be installed in the Downflow position as well as Horizontal Left & Horizontal Right positions.

|   |
|---|
|  <b>WARNING</b>  |
| <p><b>TO PREVENT POSSIBLE EQUIPMENT DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH, THE FOLLOWING BULLET POINTS MUST BE OBSERVED WHEN INSTALLING THIS UNIT.</b></p> |

Follow the instructions listed below when selecting a furnace location. Refer also to the guidelines provided in the *Combustion and Ventilation Air Requirements*.

- Centrally locate the furnace with respect to the proposed or existing air distribution system.
- Ensure the temperature of the return air entering the furnace is between 55°F and 100°F when the furnace is heating.
- Provisions must be made for venting combustion products outdoors through a proper venting system. The length of flue pipe could be a limiting factor in locating the furnace.
- Ensure adequate combustion air is available for the furnace. Improper or insufficient combustion air can expose building occupants to gas combustion products that could include carbon monoxide. Refer to *Combustion and Ventilation Air Requirements* section.
- The furnace must be level. If the furnace is to be set on a floor that may become wet or damp at times, the furnace should be supported above the floor on a concrete base sized approximately 1-½" larger than the base of the furnace.
- Ensure upflow or horizontal furnaces are not installed directly on carpeting, or any other combustible material. The only combustible material allowed is wood.

- Exposure to contaminated combustion air will result in safety and performance-related problems. Do not install the furnace where the combustion air is exposed to the following substances:

chlorinated waxes or cleaners  
 chlorine-based swimming pool chemicals  
 water softening chemicals  
 deicing salts or chemicals  
 carbon tetrachloride  
 halogen type refrigerants  
 cleaning solutions (such as perchloroethylene)  
 printing inks  
 paint removers  
 varnishes  
 hydrochloric acid  
 cements and glues  
 antistatic fabric softeners for clothes dryers  
 and masonry acid washing materials

- If the furnace is used in connection with a cooling unit, install the furnace upstream or in parallel with the cooling unit coil. Premature heat exchanger failure will result if the cooling unit coil is placed ahead of the furnace.
- For vertical applications, the minimum cooling coil width shall not be less than furnace width minus 1". Additionally, a coil installed above an upflow furnace or under a counterflow furnace may be the same width as the furnace or may be one size larger than the furnace.  
**Example:** a "C" width coil may be installed with a "B" width furnace.

- For upflow applications, the front of the coil and furnace must face the same direction.
- If the furnace is installed in a residential garage, position the furnace so that the burners and ignition source are located not less than 18 inches (457 mm) above the floor. Protect the furnace from physical damage by vehicles.
- If the furnace is installed horizontally, the furnace access doors must be vertical so that the burners fire horizontally into the heat exchanger. Do not install the unit with the access doors on the "up/top" or "down/bottom" side of the furnace.
- Do not connect this furnace to a chimney flue that serves a separate appliance designed to burn solid fuel.
- Counterflow installation over a noncombustible floor. Before setting the furnace over the plenum opening, ensure the surface around the opening is smooth and level. A tight seal should be made between the furnace base and floor by using a silicon rubber caulking compound or cement grout.
- Counterflow installation over a combustible floor. If installation over a combustible floor becomes necessary, use an accessory subbase (see Specification Sheet applicable to your model for details). A special accessory subbase must be used for upright counterflow unit installations over any combustible material including wood. Follow the instructions with the subbase for proper installations.

- Do not install the furnace directly on carpeting, tile, or other combustible material other than wood flooring. (**NOTE:** The subbase will not be required if an air conditioning coil is installed between the supply air opening on the furnace and the floor. The air conditioning coil must be downstream from the heat exchanger of the furnace.)

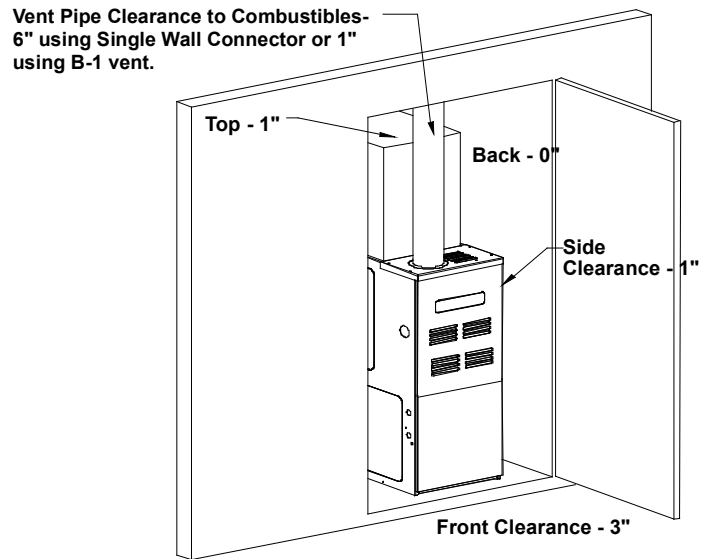


Figure 1

- Adequate combustion/ventilation air must be supplied to the closet.
- Furnace must be **completely** sealed to floor or base. Combustion/ventilation air supply pipes must terminate 12" from top of closet and 12" from floor of closet. DO NOT remove solid base plate for side return.
- Return air ducts must be **completely** sealed to the furnace and terminate outside the enclosure surfaces.

#### CLEARANCES AND ACCESSIBILITY

Unobstructed front clearance of 24" for servicing is recommended.

| VENT    |        | SIDES | FRONT | BACK | TOP (PLENUM) |
|---------|--------|-------|-------|------|--------------|
| B1-VENT | SINGLE |       |       |      |              |
| 1"      | 6"     | 1"    | 3"    | 0"   | 1"           |

Top clearance for horizontal configuration - 1"

#### INSTALLATION POSITIONS

\*M9S80 model furnaces may be installed vertically (upflow) or horizontally with left or right side down. \*C9S80 model furnaces may be installed vertically (downflow) or horizontally with left or right side down. Do not install this furnace on its back. For vertically installed *upflow* furnaces, return air ductwork may be attached to the side panel(s) and/or basepan. For *horizontally* installed *upflow* furnaces, return air ductwork must be attached to the basepan. For *counterflow* furnaces, return ductwork must be attached to the blower compartment end of the furnace.

## EXISTING FURNACE REMOVAL

**WARNING**

## CARBON MONOXIDE POISONING HAZARD

The following steps shall be followed for each appliance connected to the venting system being placed into operation, while all other appliances connected to the venting system are not in operation:

- 1) Seal any unused openings in the venting system.
- 2) Inspect the venting system for proper size and horizontal pitch, as required in the National Fuel Gas Code, ANSI Z223.1/NFPA 54 or the Natural Gas and Propane Installation Code, CSA B149.1 and these instructions. Determine that there is no blockage or restriction, leakage, corrosion and other deficiencies which could cause an unsafe condition.
- 3) As far as practical, close all building doors and windows and all doors between the space in which the appliance(s) connected to the venting system are located and other spaces of the building.

- 4) Close fireplace dampers.
- 5) Turn on clothes dryers and any appliance not connected to the venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they are operating at maximum speed. Do not operate a summer exhaust fan.
- 6) Follow the lighting instructions. Place the appliance being inspected into operation. Adjust the thermostat so appliance is operating continuously.
- 7) Test for spillage from draft hood equipped appliances at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle.
- 8) If improper venting is observed during any of the above tests, the venting system must be corrected in accordance with the National Fuel Gas Code, ANSI Z223.1/NFPA 54 and/or Natural Gas and Propane Installation Code, CSA B149.1.
- 9) After it has been determined that each appliance connected to the venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas-fired burning appliance to their previous conditions of use.



## **AVERTISSEMENT**

### **RISQUE D'INTOXICATION AU MONOXYDE DE CARBONE**

Si les étapes décrites ci-dessous ne sont pas suivies pour chacun des appareils raccordés au système de ventilation au moment de sa mise en marche, cela peut entraîner une intoxication au monoxyde de carbone ou la mort. Les étapes suivantes doivent être suivies pour chacun des appareils raccordés au système de ventilation au moment de sa mise en marche, alors que tous les autres appareils raccordés au système de ventilation ne sont pas en marche:

- 1) Sceller toutes les ouvertures inutilisées du système de ventilation.
- 2) Inspecter le système de ventilation afin de vérifier si la taille et l'inclinaison par rapport à l'horizontale sont conformes aux exigences du National Fuel Gas Code, ANSI Z223.1/NFPA 54 ou du Code d'installation du gaz naturel et du propane, CSA B149.1 et à ces instructions. Vérifier qu'il n'y a pas d'obstruction ou de restriction, de fuite, de corrosion et d'autres problèmes qui pourraient entraîner une situation dangereuse.
- 3) Si possible, fermer toutes les portes et fenêtres du bâtiment ainsi que toutes les portes séparant l'endroit où se trouvent les appareils raccordés au système de ventilation et les autres zones du bâtiment.
- 4) Fermer le registre des foyers.
- 5) Mettre les sècheuses en marche ainsi que tous les autres appareils qui ne sont pas raccordés au système de ventilation. Mettre en marche tous les ventilateurs de tirage, comme celui des hottes de cuisine et des salles de bains, et les régler à la puissance maximale. Ne pas mettre en marche les ventilateurs d'été.
- 6) Suivre les instructions d'allumage. Mettre en marche l'appareil soumis à l'inspection. Régler le thermostat de manière à ce que l'appareil fonctionne en continu.
- 7) Vérifier la présence de fuite au niveau de l'ouverture du coupe-tirage des appareils qui en sont dotés après 5 minutes de fonctionnement du brûleur principal. Utiliser la flamme d'une allumette ou d'une bougie.
- 8) Si un problème de ventilation est observé pendant l'un des essais décrits ci-dessus, des correctifs doivent être apportés au système de ventilation conformément au National Fuel Gas Code, ANSI Z223.1/NFPA 54 et (ou) au Code d'installation du gaz naturel et du propane, CSA B149.1.
- 9) Une fois qu'il a été déterminé que chaque appareil raccordé au système de ventilation fonctionne correctement au moyen des essais décrits ci-dessus, les portes, les fenêtres, les ventilateurs, les registres de foyer et tous les autres appareils de combustion alimentés au gaz doivent être remis dans leur état initial.

Corrections must be in accordance with the latest edition of the National Fuel Gas Code NFPA 54/ANSI Z223.1 and/or CAN/CSA B149 Installation Codes.

If resizing is required on any portion of the venting system, use the appropriate table in the latest edition of the National Fuel Gas Code ANSI Z223.1.

### **THERMOSTAT LOCATION**

In an area having good air circulation, locate the thermostat about five feet high on a vibration-free inside wall. Do not install the thermostat where it may be influenced by any of the following:

- Drafts, or dead spots behind doors, in corners, or under cabinets.
- Hot or cold air from registers.
- Radiant heat from the sun.
- Light fixtures or other appliances.
- Radiant heat from a fireplace.
- Concealed hot or cold water pipes, or chimneys.
- Unconditioned areas behind the thermostat, such as an outside wall.

Consult the instructions packaged with the thermostat for mounting instructions and further precautions.

### **COMBUSTION AND VENTILATION AIR REQUIREMENTS**



#### **WARNING**

**TO AVOID PROPERTY DAMAGE, PERSONAL INJURY OR DEATH, SUFFICIENT FRESH AIR FOR PROPER COMBUSTION AND VENTILATION OF FLUE GAS MUST BE SUPPLIED. MOST HOMES REQUIRE OUTSIDE AIR BE SUPPLIED INTO THE FURNACE AREA.**

Improved construction and additional insulation in buildings have reduced heat loss by reducing air infiltration and escape around doors and windows. These changes have helped in reducing heating/cooling costs but have created a problem supplying combustion and ventilation air for gas fired and other fuel burning appliances. Appliances that pull air out of the house (clothes dryers, exhaust fans, fireplaces, etc.) increase the problem by starving appliances for air.

House depressurization can cause back drafting or improper combustion of gas-fired appliances, thereby exposing building occupants to gas combustion products that could include carbon monoxide.

If this furnace is to be installed in the same space with other gas appliances, such as a water heater, ensure there is an adequate supply of combustion and ventilation air for all appliances. Refer to the latest edition of the National Fuel Gas Code NFPA 54/ANSI Z223.1 or CAN/CSA B149 Installation Codes or applicable provisions of the local building codes for determining the combustion air requirements for the appliances.

*This furnace must use indoor air for combustion. It cannot be installed as a direct vent (i.e., sealed combustion) furnace.*



Most homes will require outside air be supplied to the furnace area by means of ventilation grilles or ducts connecting directly to the outdoors or spaces open to the outdoors such as attics or crawl spaces.

### Category I Venting (Vertical Venting)



#### WARNING

**TO PREVENT POSSIBLE PERSONAL INJURY OR DEATH DUE TO ASPHYXIATION, THIS FURNACE MUST BE CATEGORY I VENTED. DO NOT VENT USING CATEGORY III VENTING.**

Category I Venting is venting at a non-positive pressure. A furnace vented as Category I is considered a fan-assisted appliance and the vent system does not have to be “gas tight”. **NOTE:** Gas furnaces with induced draft blowers draw products of combustion through a heat exchanger allowing, in some instances, common venting with natural draft appliances (i.e. water heaters). All installations must be vented in accordance with National Fuel Gas Code NFPA 54/ANSI Z223.1 - latest edition.

**NOTE:** The vertical height of the Category I venting system must be at least as great as the horizontal length of the venting system.



#### WARNING

**TO PREVENT POSSIBLE PERSONAL INJURY OR DEATH DUE TO ASPHYXIATION, COMMON VENTING WITH OTHER MANUFACTURER’S INDUCED DRAFT APPLIANCES IS NOT ALLOWED.**

The minimum vent diameter for the Category I venting system is as shown:

| MODEL | MINIMUM VENT |             |
|-------|--------------|-------------|
|       | UPFLOW       | COUNTERFLOW |
| 060   | 4 inch       | 4 inch      |
| 080   | 4 inch       | 4 inch      |
| 100   | 5 inch       | 4 inch      |

Under some conditions, larger vents than those shown above may be required or allowed. *When an existing furnace is removed from a venting system serving other appliances*, the venting system may be too large to properly vent the remaining attached appliances.

*Furnaces* are shipped with the induced draft blower discharging from the top of the furnace. (“Top” is as viewed for an upflow installation.) The induced draft blower on \*M9S80 models can be rotated 90 degrees for Category I venting. For furnaces installed vertically or horizontally, a four-inch single wall pipe can be used to extend the induced draft blower outlet ½” beyond the furnace cabinet. On \*M9S80 furnaces installed upflow or horizontally with left side down, the draft inducer may be rotated to discharge from the right side of the cabinet. When rotating the inducer a chimney

transition bottom kit (part # 4053501S) is needed for proper alignment of the inducer outlet and the vent exit hole in the side of the cabinet. The inducer may NOT be rotated on \*C9S80 model furnaces regardless of installation position.

THIS PRODUCT IS NOT DESIGNED FOR COUNTERCLOCKWISE INDUCED DRAFT BLOWER ROTATION.

Vent the furnace in accordance with the National Fuel Gas Code NFPA 54/ANSI Z223.1 - latest edition.

### VENTING

THIS FURNACE IS NOT DESIGN CERTIFIED TO BE HORIZONTALLY VENTED.

To rotate the induced draft blower clockwise, you will need to purchase one (4053501S) chimney transition bottom kit.

1. Disconnect electrical power from the furnace.
2. Disconnect the induced draft blower power leads, flue pipe, and pressure switch tubing.
3. Remove the round cutout from the right side of the wrapper.
4. Remove and save the four screws that fasten the induced draft blower to the flue collector box.
5. Remove and save the three screws that hold the chimney assembly to the induced draft blower.
6. Remove and save the four screws that fasten the chimney top to the chimney bottom.
7. Remove the chimney transition bottom from the transition bottom kit.
8. Install the chimney top with the four screws retained from step 6 onto the new chimney transition bottom from the transition bottom kit.
9. Install chimney assembly with the three screws retained from step 5 onto the induced draft blower.
10. Reinstall the induced draft blower rotating it 90 degrees clockwise from the original upflow configuration using the four screws retained in step 3. Ensure the gasket located between the induced draft blower and the collector box is rotated accordingly.
11. Reconnect the induced draft blower power leads. **NOTE:** If the wires are not long enough, pull extra wire from the wire bundle in the blower compartment.
12. Reconnect the flue pipe, and the pressure switch tubing. Ensure that all wires and the pressure switch tubing is at least one inch from the flue pipe, or any other hot surface.
13. Restore power to furnace.

**Counterflow units** are shipped with the induced draft blower discharging from the top of the furnace. (“Top” as viewed for a counterflow installation.)

Vent the furnace in accordance with the National Fuel Gas Code NFPA54/ANSI Z223.1 - latest edition.



#### WARNING

**NEVER ALLOW THE PRODUCTS OF COMBUSTION, INCLUDING CARBON MONOXIDE, TO ENTER THE RETURN DUCTWORK OR CIRCULATION AIR SUPPLY.**

## MASONRY CHIMNEYS



### WARNING

POSSIBILITY OF PROPERTY DAMAGE, PERSONAL INJURY OR DEATH DAMAGING CONDENSATION CAN OCCUR INSIDE MASONRY CHIMNEYS WHEN A SINGLE FAN-ASSISTED CATEGORY I APPLIANCE (80% AFUE FURNACE) IS VENTED WITHOUT ADEQUATE DILUTION AIR. DO NOT CONNECT AN 80% FURNACE TO A MASONRY CHIMNEY UNLESS THE FURNACE IS COMMON VENTED WITH A DRAFT HOOD EQUIPPED APPLIANCE OR THE CHIMNEY IS LINED WITH A METAL LINER OR TYPE B METAL VENT. ALL INSTALLATIONS USING MASONRY CHIMNEYS MUST BE SIZED IN ACCORDANCE WITH APPROPRIATE VENTING TABLES. IF AN 80% FURNACE COMMON VENTED WITH A DRAFT HOOD EQUIPPED APPLIANCE, THE POTENTIAL FOR CONDENSATION DAMAGE MAY STILL EXIST WITH EXTREMELY COLD CONDITIONS, LONG VENT CONNECTORS, EXTERIOR CHIMNEYS, OR ANY COMBINATION OF THESE CONDITIONS. THE RISK OF CONDENSATION DAMAGES IS BEST AVOIDED BY USING MASONRY CHIMNEY AS A PATHWAY FOR PROPERLY SIZED METAL LINER OR TYPE B METAL VENT.

## MASONRY CHIMNEY TERMINATIONS

A masonry chimney used as a vent for gas fired equipment must extend at least three feet above the highest point where it passes through the roof. It must extend at least two feet higher than any portion of a building within a horizontal distance of 10 feet. In addition, the chimney must terminate at least three feet above any forced air inlet located within 10 feet. The chimney must extend at least five above the highest connected equipment draft hood outlet or flue collar.

## ELECTRICAL CONNECTIONS



### WARNING

#### HIGH VOLTAGE!

TO AVOID THE RISK OF ELECTRICAL SHOCK, WIRING TO THE UNIT MUST BE POLARIZED AND GROUNDED.



### CAUTION

LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING CONTROLS. WIRING ERRORS CAN CAUSE IMPROPER AND DANGEROUS OPERATION. VERIFY PROPER OPERATION AFTER SERVICING.



### WARNING

#### HIGH VOLTAGE!

TO AVOID RISK OF INJURY, ELECTRICAL SHOCK OR DEATH, THE FURNACE MUST BE ELECTRICALLY GROUNDED IN ACCORDANCE WITH LOCAL CODES OR IN THEIR ABSENCE, WITH THE LATEST EDITION OF THE NATIONAL ELECTRIC CODE.



### WARNING

EDGES OF SHEET METAL HOLES MAY BE SHARP. USE GLOVES AS A PRECAUTION WHEN REMOVING HOLE PLUGS.

## WIRING HARNESS

The wiring harness is an integral part of this furnace. Field alteration to comply with electrical codes should not be required. Wires are color coded for identification purposes. Refer to the wiring diagram for wire routings. If any of the original wire as supplied with the furnace must be replaced, it must be replaced with wiring material having a temperature rating of at least 105°C. Any replacement wiring must be a copper conductor.

## 115 VOLT LINE CONNECTIONS

Before proceeding with electrical connections, ensure that the supply voltage, frequency, and phase correspond to that specified on the unit rating plate. Power supply to the furnace must be NEC Class 1, and must comply with all applicable codes. The furnace must be electrically grounded in accordance with local codes or, in their absence, with the latest edition of The National Electric Code, ANSI NFPA 70 and/or The Canadian Electric Code CSA C22.1.

Use a separate fused branch electrical circuit containing properly sized wire, and fuse or circuit breaker. The fuse or circuit breaker must be sized in accordance with the maximum overcurrent protection specified on the unit rating plate. An electrical disconnect must be provided at the furnace location.

Connect hot, neutral, and ground wires as shown in the wiring diagram located on the unit's blower door. Metal conduit is not considered a substitute for an actual ground wire to the unit.

Line polarity must be observed when making field connections. Line voltage connections can be made through either the right or left side panel. The furnace is shipped configured for a right side electrical connection with the junction box located inside the burner compartment (blower compartment for downflows). To make electrical connections through the opposite side of the furnace, the junction box must be relocated to the other side of the burner (or blower) compartment prior to making electrical connections. To relocate the junction box, follow the steps shown below.

**NOTE:** Wire routing must not to interfere with circulator blower operation, filter removal, or routine maintenance.

## JUNCTION BOX RELOCATION



### WARNING

EDGES OF SHEET METAL HOLES MAY BE SHARP. USE GLOVES AS A PRECAUTION WHEN REMOVING HOLE PLUGS.




### WARNING

TO PREVENT PERSONAL INJURY OR DEATH DUE TO ELECTRIC SHOCK, DISCONNECT ELECTRICAL POWER BEFORE INSTALLING OR SERVICING THIS UNIT.

1. Remove both doors from the furnace.
2. Remove and save the screws holding the junction box to the right side of the furnace.
3. Attach the junction box to the left side of the furnace, using the screws removed in step 2.
4. Check the location of the wiring. Confirm that it will not be damaged by heat from the burners or by the rotation of the fan. Also confirm that wiring location will not interfere with filter removal or other maintenance.

**IMPORTANT NOTE:** To avoid possible equipment malfunction, route the low voltage wires to avoid interference with filter removal or other maintenance.

|  |
|--|
|  <b>WARNING</b>   |
| <b>HIGH VOLTAGE!</b><br>To avoid risk of injury, electrical shock or death, the furnace must be electrically grounded in accordance with local codes or in their absence, with the latest edition of the National Electric Code. |

To ensure proper unit grounding, the ground wire should run from the furnace ground screw located inside the furnace junction box all the way back to the electrical panel. **NOTE:** Do not use gas piping as an electrical ground. To confirm proper unit grounding, turn off the electrical power and perform the following check.

1. Measure resistance between the neutral (white) connection and one of the burners.
2. Resistance should measure 10 ohms or less.

This furnace is equipped with a blower door interlock switch which interrupts unit voltage when the blower door is opened for servicing. Do not defeat this switch.

## GAS SUPPLY AND PIPING

The furnace rating plate includes the approved furnace gas input rating and gas types. The furnace must be equipped to operate on the type of gas applied. This includes any conversion kits required for alternate fuels and/or high altitude.

|   |
|---|
|  <b>CAUTION</b>  |
| To prevent unreliable operation or equipment damage, the inlet gas supply pressure must be as specified on the unit rating plate with all other household gas fired appliances operating. |

Inlet gas supply pressures must be maintained within the ranges specified in the following table. The supply pressure must be constant and available with all other household gas fired appliances operating. The minimum gas supply pressure must be maintained to prevent unreliable ignition. The maximum must not be exceeded to prevent unit overfiring.

**NOTE:** Do not remove the gas valve inlet plug before the gas line is installed. Replace if water or debris has been introduced.

| INLET GAS SUPPLY PRESSURE |                     |                     |
|---------------------------|---------------------|---------------------|
| Natural Gas               | Minimum: 4.5" w.c.  | Maximum: 10.0" w.c. |
| Propane Gas               | Minimum: 11.0" w.c. | Maximum: 13.0" w.c. |

**NOTE:** Adjusting the minimum supply pressure below the limits in the above table could lead to unreliable ignition. Gas input to the burners must not exceed the rated input shown on the rating plate. Overfiring of the furnace can result in premature heat exchanger failure. Gas pressures in excess of 13 inches water column can also cause permanent damage to the gas valve.

At all altitudes, the manifold pressure must be within 0.3 inches w.c. of that listed in the Specification Sheet applicable to your model for the fuel used. At all altitudes and with either fuel, the air temperature rise must be within the range listed on the furnace nameplate. Should this appliance be converted to LP, refer to the instructions included in the factory authorized LP conversion kit.

## HIGH ALTITUDE DERATE

When this furnace is installed at high altitude, the appropriate High Altitude orifice kit must be applied. This is required due to the natural reduction in the density of both the gas fuel and combustion air as altitude increases. The kit will provide the proper design certified input rate within the specified altitude range.

High altitude kits are purchased according to the installation altitude and usage of either natural or propane gas. Consult the furnace Specification Sheet for appropriate kits.

Do **not** derate the furnace by adjusting the manifold pressure to a lower pressure than specified on the furnace rating plate. The combination of the lower air density and a lower manifold pressure will prohibit the burner orifice from drawing the proper amount of air into the burner. This may cause incomplete combustion, flashback, and possible yellow tipping.

In some areas the gas supplier may artificially derate the gas in an effort to compensate for the effects of altitude. If the gas is artificially derated, the appropriate orifice size must be determined based upon the BTU/ft<sup>3</sup> content of the derated gas and the altitude. Refer to the National Fuel Gas Code, NFPA 54/ANSI Z223.1, and information provided by the gas supplier to determine the proper orifice size.

A different pressure switch may be required at high altitude regardless of the BTU/ft<sup>3</sup> content of the fuel used. Consult the furnace Specification Sheet for pressure switch.

|  |
|--|
|  <b>WARNING</b>   |
| POSSIBLE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH MAY OCCUR IF THE CORRECT CONVERSION KITS ARE NOT INSTALLED. THE APPROPRIATE KITS MUST BE APPLIED TO ENSURE SAFE AND PROPER FURNACE OPERATION. ALL CONVERSIONS MUST BE PERFORMED BY A QUALIFIED INSTALLER OR SERVICE AGENCY. |

Consult the furnace Specification Sheet for appropriate manufacturer's kits for propane gas and/or high altitude installations. The indicated kits must be used to insure safe and proper furnace operation. All conversions must be performed by a qualified installer, or service agency.

## PROPANE GAS CONVERSION

|  |
|--|
|  <b>WARNING</b>   |
| <p><b>POSSIBLE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH MAY OCCUR IF THE CORRECT CONVERSION KITS ARE NOT INSTALLED. THE APPROPRIATE KITS MUST BE APPLIED TO ENSURE SAFE AND PROPER FURNACE OPERATION. ALL CONVERSIONS MUST BE PERFORMED BY A QUALIFIED INSTALLER OR SERVICE AGENCY.</b></p> |

This unit is configured for natural gas. The appropriate manufacturer's propane gas conversion kit must be applied for propane gas installations.

| Gas     | Altitude | Kit                  | Orifice | Manifold Pressure |           | Pressure Switch Change |
|---------|----------|----------------------|---------|-------------------|-----------|------------------------|
|         |          |                      |         | High Stage        | Low Stage |                        |
| Natural | 0-7000   | None                 | #45     | 3.5" w.c.         | 1.9" w.c. | None                   |
| Propane |          | LPM-07* <sup>1</sup> | 1.25mm  | 10.0" w.c.        | 6.0" w.c. | None                   |

<sup>1</sup> LPM-07\* supports both Honeywell and White-Rodgers 1-stage valves

**NOTE:** In Canada, gas furnaces are only certified to 4500 feet.

If converting to LP gas, it is recommended that an LPLP0\* kit also be installed. The use of this kit will prevent the furnace from firing when the LP gas supply pressure is too low to support proper combustion.

## GAS VALVE

This unit is equipped with a 24 volt gas valve controlled during furnace operation by the integrated control module. As shipped, the valve is configured for natural gas. The valve is field convertible for use with propane gas by replacing the regulator spring with a propane gas spring from an appropriate manufacturer's propane gas conversion kit. Taps for measuring the gas supply pressure and manifold pressure are provided on the valve.

The gas valve has a manual ON/OFF control located on the valve itself. This control may be set only to the "ON" or "OFF" position. Refer to the lighting instructions label or *Startup Procedure & Adjustment* for use of this control during start up and shut down periods.

## GAS PIPING CONNECTIONS

When sizing gas lines, be sure to include all appliances which will operate simultaneously.

The gas piping supplying the furnace must be properly sized based on the gas flow required, specific gravity of the gas, and length of the run. The gas line installation must comply with local codes, or in their absence, with the latest edition of

the National Fuel Gas Code, NFPA 54/ANSI Z223.1.

**Natural Gas Capacity of Pipe  
In Cubic Feet of Gas Per Hour (CFH)**

| Length of Pipe in Feet | Nominal Black Pipe Size |      |     |        |        |
|------------------------|-------------------------|------|-----|--------|--------|
|                        | 1/2"                    | 3/4" | 1"  | 1 1/4" | 1 1/2" |
| 10                     | 132                     | 278  | 520 | 1050   | 1600   |
| 20                     | 92                      | 190  | 350 | 730    | 1100   |
| 30                     | 73                      | 152  | 285 | 590    | 980    |
| 40                     | 63                      | 130  | 245 | 500    | 760    |
| 50                     | 56                      | 115  | 215 | 440    | 670    |
| 60                     | 50                      | 105  | 195 | 400    | 610    |
| 70                     | 46                      | 96   | 180 | 370    | 560    |
| 80                     | 43                      | 90   | 170 | 350    | 530    |
| 90                     | 40                      | 84   | 160 | 320    | 490    |
| 100                    | 38                      | 79   | 150 | 305    | 460    |

(Pressure 0.5 psig or less and pressure drop of 0.3" W.C.; Based on 0.60 Specific Gravity Gas)

$$CFH = \frac{BTUH \text{ Furnace Input}}{\text{Heating Value of Gas (BTU/Cubic Foot)}}$$


To connect the furnace to the building's gas piping, the installer must supply a ground joint union, drip leg, manual shutoff valve, and line and fittings to connect to gas valve. In some cases, the installer may also need to supply a transition piece from 1/2" pipe to a larger pipe size.

The following stipulations apply when connecting gas piping.

- Gas piping must be supported external to the furnace cabinet so that the weight of the gas line does not distort the burner rack, manifold or gas valve.
- Use black iron or steel pipe and fittings for the building piping.
- Use pipe joint compound on male threads only. Pipe joint compound must be resistant to the action of the fuel used.
- Use ground joint unions.
- Install a drip leg to trap dirt and moisture before it can enter the gas valve. The drip leg must be a minimum of three inches long.
- Use two pipe wrenches when making connection to the gas valve to keep it from turning. The orientation of the gas valve on the manifold must be maintained as shipped from the factory.
- Install a manual shutoff valve between the gas meter and unit within six feet of the unit. If a union is installed, the union must be downstream of the manual shutoff valve, between the shutoff valve and the furnace.
- Tighten all joints securely.
- Connect the furnace to the building piping by one of the following methods:
  - Rigid metallic pipe and fittings.
  - Semi-rigid metallic tubing and metallic fittings. Aluminum alloy tubing must not be used in exterior locations.
  - Use listed gas appliance connectors in accordance with their instructions. Connectors must be fully in the same room as the furnace.
  - Protect connectors and semi-rigid tubing against physical and thermal damage when installed. Ensure aluminum-alloy tubing and connectors are coated to protect against external corrosion when in contact with masonry, plaster, or insulation, or subjected to re-



peated wetting by liquids such as water (except rain water), detergents, or sewage.

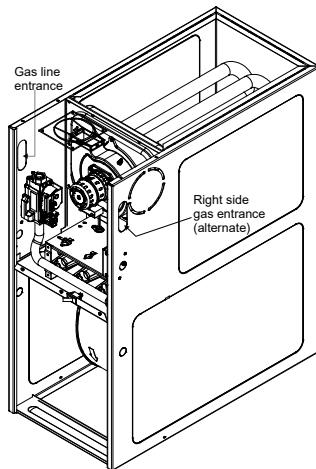

General Furnace Layout  
Figure 3

### UPFLOW INSTALLATIONS

When the gas piping enters through the side of the furnace, the installer must supply the following fittings (starting from the gas valve):

- Close nipple.
- 90 degree elbow.
- Straight pipe to reach the exterior of the furnace.

A ground joint union, drip leg, and manual shutoff valve must also be supplied by the installer. In some cases, the installer may also need to supply a transition piece from ½" to another pipe size.

When the gas piping enters through the left side of the furnace, the installer must supply the following fittings (starting from the gas valve):

- 90 degree elbow.
- Straight pipe to reach the exterior of the furnace.
- A ground joint union, drip leg, and manual shutoff valve must also be supplied by the installer. In some cases, the installer may also need to supply a transition piece from ½ inch to another pipe size.

### COUNTERFLOW INSTALLATIONS

When the gas piping enters through the left side of the furnace, the installer must supply a straight pipe and a 90 degree elbow to reach the exterior of the furnace.

A ground joint union, drip leg and manual shutoff valve must also be supplied by the installer. In most cases, the installer may also need to supply a transition piece from ½" to another pipe size. When the gas piping enters through the right side of the furnace, the installer must supply the following fittings (starting at the gas valve):

- Close Nipple
- 90 Degree Elbow
- Straight Pipe to Reach Exterior of Furnace.

### GAS PIPING CHECKS

Before placing unit in operation, leak test the unit and gas connections.



#### WARNING

TO AVOID THE POSSIBILITY OF EXPLOSION OR FIRE, NEVER USE A MATCH OR OPEN FLAME TO TEST LEAKS.

Check for leaks using an approved chloride-free soap and water solution, an electronic combustible gas detector, or other approved testing methods.



#### WARNING

TO PREVENT PROPERTY DAMAGE OR PERSONAL INJURY DUE TO FIRE, THE FOLLOWING INSTRUCTIONS MUST BE PERFORMED REGARDING GAS CONNECTIONS, PRESSURE TESTING, LOCATION OF SHUTOFF VALVE AND INSTALLATION OF GAS PIPING.

**NOTE:** Never exceed specified pressures for testing. Higher pressure may cause gas valve failure.

Disconnect this unit and shutoff valve from the gas supply piping system before pressure testing the supply piping system with pressures in excess of ½ psig (3.48 kPa).

This unit must be isolated from the gas supply system by closing its manual shutoff valve before pressure testing of gas supply piping system with test pressures equal to or less than ½ psig (3.48 kPa).

### PROPANE GAS TANKS AND PIPING

A gas detecting warning system is the only reliable way to detect a propane gas leak. Rust can reduce the level of odorant in propane gas. Do not rely on your sense of smell. Contact a local propane gas supplier about installing a gas detecting warning system. If the presence of gas is suspected, follow the instructions on Page 3 of this manual.

All propane gas equipment must conform to the safety standards of the National Board of Fire Underwriters, NBFU Manual 58.


For satisfactory operation, propane gas pressure must be 10 inch WC at the furnace manifold with all gas appliances in operation. Maintaining proper gas pressure depends on three main factors:

1. Vaporization rate, depending on temperature of the liquid, and "wetted surface" area of the container or containers.
2. Proper pressure regulation (Two-stage regulation is recommended for both cost and efficiency).
3. Pressure drop in lines between regulators, and between second stage regulator and the appliance. Pipe size will depend on length of pipe run and total load of all appliances.

Complete information regarding tank sizing for vaporization, recommended regulator settings, and pipe sizing is available from most regulator manufacturers and propane gas suppliers.

Use a pipe thread compound that is approved for natural gas and LP Gas.

Refer to the following illustration for typical propane gas installations and piping.

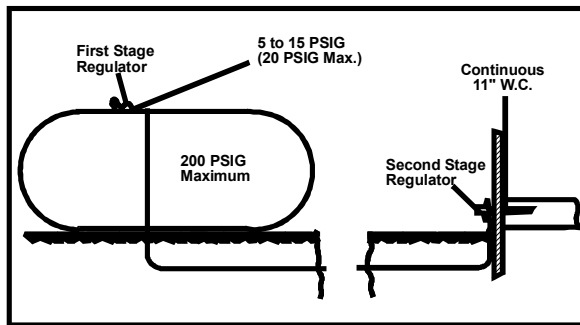

Propane Gas Installation (Typ.)  
Figure 4

## PROPANE GAS PIPING CHARTS

Sizing Between First and Second Stage Regulator\*  
Maximum Propane Capacities listed are based on 2 psig pressure drop at 10 psig setting.  
Capacities in 1,000 BTU/hour.

| Pipe or Tubing Length, Feet | Tubing Size, O.D. Type L |       |       |       |       | Nominal Pipe Size Schedule 40 |       |
|-----------------------------|--------------------------|-------|-------|-------|-------|-------------------------------|-------|
|                             | 3/8"                     | 1/2"  | 5/8"  | 3/4"  | 7/8"  | 1/2"                          | 3/4"  |
| 10                          | 730                      | 1,700 | 3,200 | 5,300 | 8,300 | 3,200                         | 7,500 |
| 20                          | 500                      | 1,100 | 2,200 | 3,700 | 5,800 | 2,200                         | 4,200 |
| 30                          | 400                      | 920   | 2,000 | 2,900 | 4,700 | 1,800                         | 4,000 |
| 40                          | 370                      | 850   | 1,700 | 2,700 | 4,100 | 1,600                         | 3,700 |
| 50                          | 330                      | 770   | 1,500 | 2,400 | 3,700 | 1,500                         | 3,400 |
| 60                          | 300                      | 700   | 1,300 | 2,200 | 3,300 | 1,300                         | 3,100 |
| 80                          | 260                      | 610   | 1,200 | 1,900 | 2,900 | 1,200                         | 2,600 |
| 100                         | 220                      | 540   | 1,000 | 1,700 | 2,600 | 1,000                         | 2,300 |
| 125                         | 200                      | 490   | 900   | 1,400 | 2,300 | 900                           | 2,100 |
| 150                         | 190                      | 430   | 830   | 1,300 | 2,100 | 830                           | 1,900 |
| 175                         | 170                      | 400   | 780   | 1,200 | 1,900 | 770                           | 1,700 |
| 200                         | 160                      | 380   | 730   | 1,100 | 1,800 | 720                           | 1,500 |

Sizing Between Second Stage and Appliance Regulator\*  
Maximum Propane Capacities listed are based on 2 psig pressure drop at 10 psig setting.  
Capacities in 1,000 BTU/hour.

| Pipe or Tubing Length, Feet | Tubing Size, O.D. Type L |      |      |      |      |        | Nominal Pipe Size Schedule 40 |      |       |        |        |
|-----------------------------|--------------------------|------|------|------|------|--------|-------------------------------|------|-------|--------|--------|
|                             | 3/8"                     | 1/2" | 5/8" | 3/4" | 7/8" | 1-1/8" | 1/2"                          | 3/4" | 1"    | 1-1/4" | 1-1/2" |
| 10                          | 39                       | 92   | 199  | 329  | 501  | 935    | 275                           | 567  | 1,071 | 2,205  | 3,307  |
| 20                          | 26                       | 62   | 131  | 216  | 346  | 630    | 189                           | 393  | 732   | 1,496  | 2,299  |
| 30                          | 21                       | 50   | 107  | 181  | 277  | 500    | 152                           | 315  | 590   | 1,212  | 1,858  |
| 40                          | 19                       | 41   | 90   | 145  | 233  | 427    | 129                           | 267  | 504   | 1,039  | 1,559  |
| 50                          | 18                       | 37   | 79   | 131  | 198  | 376    | 114                           | 237  | 448   | 910    | 1,417  |
| 60                          | 16                       | 35   | 72   | 121  | 187  | 340    | 103                           | 217  | 409   | 834    | 1,275  |
| 80                          | 13                       | 29   | 62   | 104  | 155  | 289    | 89                            | 185  | 346   | 724    | 1,066  |
| 100                         | 11                       | 26   | 55   | 90   | 138  | 255    | 78                            | 162  | 307   | 630    | 976    |
| 125                         | 10                       | 24   | 48   | 81   | 122  | 224    | 69                            | 146  | 275   | 567    | 866    |
| 150                         | 9                        | 21   | 43   | 72   | 109  | 202    | 63                            | 132  | 252   | 511    | 787    |
| 200                         | 8                        | 19   | 39   | 66   | 100  | 187    | 54                            | 112  | 209   | 439    | 665    |
| 250                         | 8                        | 17   | 36   | 60   | 93   | 172    | 48                            | 100  | 185   | 390    | 590    |

## CIRCULATING AIR



### WARNING

NEVER ALLOW THE PRODUCTS OF COMBUSTION, INCLUDING CARBON MONOXIDE, TO ENTER THE RETURN DUCT WORK OR CIRCULATION AIR SUPPLY.

Duct systems and register sizes must be properly designed for the CFM and external static pressure rating of the furnace. Ductwork should be designed in accordance with the recommended methods of "Air Conditioning Contractors of America" Manual D.

A duct system must be installed in accordance with Standards of the National Board of Fire Underwriters for the Installation of Air Conditioning, Warm Air Heating and Ventilating Systems. Pamphlets No. 90A and 90B.

A closed return duct system must be used, with the return duct connected to the furnace. **NOTE:** Ductwork must never be attached to the back of the furnace. For installations requiring more than 1800 CFM, use a bottom return or two sided return. Supply and return connections to the furnace may be made with flexible joints to reduce noise transmission. To prevent the blower from interfering with combustion air or draft when a central return is used, a connecting duct must be installed between the unit and the utility room wall. A room, closet, or alcove must not be used as a return air chamber.

When the furnace is used in connection with a cooling unit, the furnace should be installed in parallel with or on the upstream side of the cooling unit to avoid condensation in the heating element. With a parallel flow arrangement, the dampers or other means used to control the flow of air must be adequate to prevent chilled air from entering the furnace and, if manually operated, must be equipped with means to prevent operation of either unit unless the damper is in the full heat or cool position.

When the furnace is installed without a cooling coil, it is recommended that a removable access panel be provided in the outlet air duct. This opening shall be accessible when the furnace is installed and shall be of such a size that the heat exchanger can be viewed for visual light inspection or such that a sampling probe can be inserted into the air stream. The access panel must be made to prevent air leaks when the furnace is in operation.

When furnace duct(s) supply air outside the space containing the furnace, a return air duct must terminate in the same space as the supply duct and be sealed to the furnace casing.

When the furnace is heating, the temperature of the return air entering the furnace must be between 55°F and 100°F.

## CHECKING DUCT STATIC

Refer to your furnace rating plate for the maximum ESP (external duct static) rating.

Total external static refers to static pressure created by all components external to the furnace cabinet. Cooling coils, filters, ducts, grilles, registers must all be considered when reading your total external static pressure. The supply duct pressure must be read between the furnace and the cooling coil. This reading is usually taken by removing the "A" shaped block off plate from the end on the coil; drilling a test hole in it and reinstalling the block off plate. Take a duct static reading at the test hole. Tape up the test hole after your test is complete. The negative pressure must be read between the filter and the furnace blower.

Too much external static pressure will result in insufficient air that can cause excessive temperature rise. This can cause limit switch tripping and heat exchanger failure.

To determine total external duct static pressure, proceed as follows:

4. With clean filters in the furnace, use a manometer to measure the static pressure of the return duct at the inlet of the furnace. (Negative Pressure)
5. Measure the static pressure of the supply duct. (Positive Pressure)
6. The difference between the two numbers is .4" w.c.

**Example:**

static reading from return duct = -.1" w.c.


static reading from supply duct = .3" w.c.

total external static pressure on this system = .4" w.c.

**NOTE:** Both readings may be taken simultaneously and read directly on the manometer if so desired. If an air conditioner coil or Electronic Air Cleaner is used in conjunction with the furnace, the readings must also include these components, as shown in the following drawing.

7. Consult proper tables for the quantity of air.

If the total external static pressure exceeds the maximum listed on the furnace rating plate, check for closed dampers, registers, undersized or poorly laid out duct work.

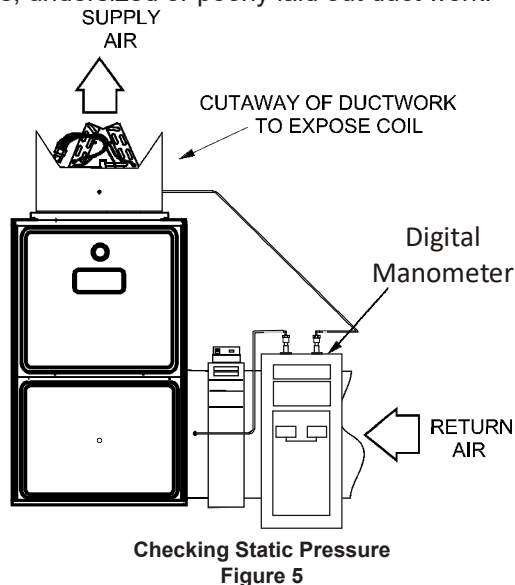

## FILTERS - READ THIS SECTION BEFORE INSTALLING THE RETURN AIR DUCTWORK

Filters must be used with this furnace. Discuss filter maintenance with the building owner. Filters do not ship with this furnace, but must be provided by the installer. Filters must comply with UL900 or CAN/ULCS111 standards. Damage or repairs due to the installation of the furnace without filters is not covered under the warranty.


### UPRIGHT INSTALLATIONS

Depending on the installation and/or customer preference, differing filter arrangements can be applied. Filters can be installed in the central return register or a side panel external filter rack kit (upflows), or the ductwork above a downflow furnace. As an alternative, a media air filter or electronic air cleaner can be used as the primary filter.

### HORIZONTAL INSTALLATIONS


Filters must be installed in either the central return register or in the return air duct work.

### CIRCULATION AIR FILTERS

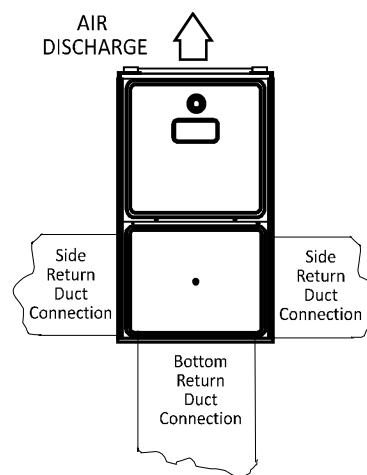


UPFLOW UPRIGHT

Figure 6

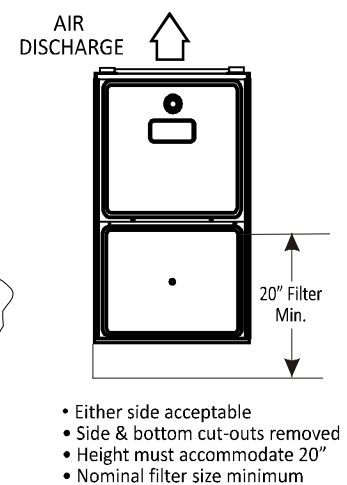


SIDE/BOTTOM  
RETURN DUCT OPTION

Figure 7

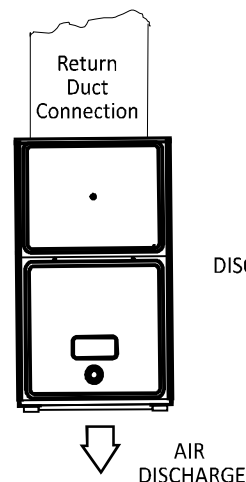


COUNTERFLOW

Figure 8

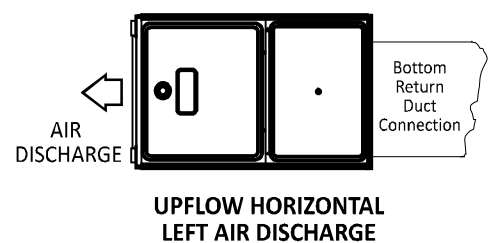

UPFLOW HORIZONTAL  
LEFT AIR DISCHARGE

Figure 9

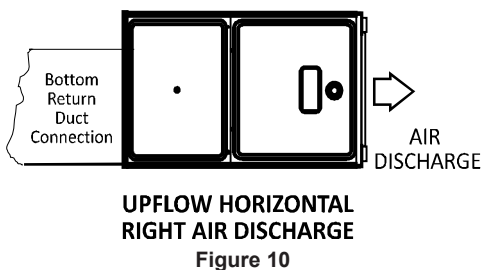

One of the most common causes of a problem in a forced air heating system is a blocked or dirty filter. Circulating air filters must be inspected monthly for dirt accumulation and replaced if necessary. Failure to maintain clean filters can cause premature heat exchanger failure.

A new home may require more frequent replacement until all construction dust and dirt is removed.

| Upflow Models   | Minimum Recommended Filter Size                            |
|-----------------|--|
| *0403A*         | 1 - 16 X 25 Side or 1 - 14 X 24 Bottom Return              |
| *0603A*         | 1 - 16 X 25 Side or 14 X 24 Bottom Return                  |
| *0603B*         | 1 - 16 X 25 Side or Bottom Return                          |
| *0604B*         | 1 - 16 X 25 Side or Bottom Return                          |
| *0803B*         | 1 - 16 X 25 Side or Bottom Return                          |
| *0804B*         | 1 - 16 X 25 Side or Bottom Return                          |
| *0804C*         | 1 - 16 X 25 Side or Bottom Return                          |
| *0805C*         | 1 - 16 X 25 Side or Bottom Return <sup>1</sup>             |
| *1005C*         | 2 - 16 X 25 Side or 1 - 20 X 25 Bottom Return <sup>1</sup> |
| *1205D*         | 2 - 16 X 25 Side or 1 - 24 X 24 Bottom Return <sup>1</sup> |
| Downflow Models |  |
| *0403A*         | 2 - 10 X 20 or 1 - 14 X 25 Top Return                      |
| *0603A*         | 2 - 10 X 20 or 1 - 14 X 25 Top Return                      |
| *0804B*         | 2 - 14 X 20 or 1 - 16 X 25 Top Return                      |
| *0805C*         | 2 - 14 X 20 or 1 - 20 X 25 Top Return                      |
| *1005C*         | 2 - 14 X 20 or 1 - 20 X 25 Top Return                      |

Larger filters may be used, filters may also be centrally located

<sup>1</sup> = Use 2 - 16 X 25 filters and two side returns or 20 X 25 filter on bottom return if furnace is connected to a cooling unit over 4 tons nominal capacity

A combination of one side & bottom may be used instead of both sides


## ELECTRICAL

### 24 VOLT THERMOSTAT WIRING


**Important Note:** Wiring routing must not interfere with circulator blower operation, filter removal or routine maintenance. Low voltage connections can be made through either the right or left side panel. Thermostat wiring entrance holes are located in the blower compartment. The following figure shows connections for a “heat/cool system”.

This furnace is equipped with a 40 VA transformer to facilitate use with most cooling equipment. Consult the wiring diagram, located on the blower compartment door, for further details of 115 Volt and 24 Volt wiring.

### Thermostat Wiring Diagrams

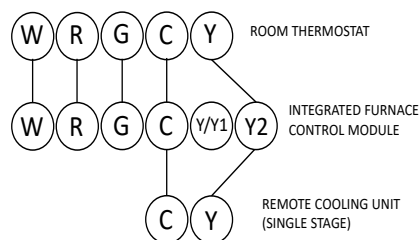

Thermostat - Single-Stage Heating with Single-Stage Cooling  
Figure 11

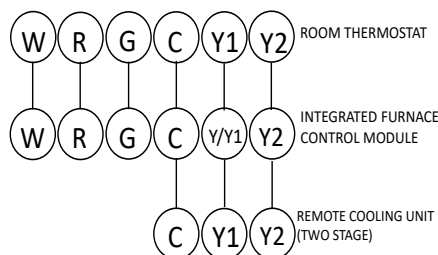

Thermostat - Single-Stage Heating with Two-Stage Cooling  
Figure 12

### FOSSIL FUEL APPLICATIONS

This furnace can be used in conjunction with a heat pump in a fossil fuel application. A fossil fuel application refers to a combined gas furnace and heat pump installation which uses an outdoor temperature sensor to determine the most cost efficient means of heating (heat pump or gas furnace).

A heat pump thermostat is required to properly use a single-stage furnace in conjunction with a heat pump. Refer to the fossil fuel kit installation instructions for additional thermostat requirements.

Strictly follow the wiring guidelines in the fossil fuel kit installation instructions. All furnace connections must be made to the furnace two-stage integrated control module and the “FURNACE” terminal strip on the fossil fuel control board.

### TWINNING

Two furnaces of the same model may be twinned. The integrated control board has a 3/16” terminal labeled “TWIN” located beside the low voltage thermostat connection strip. Twinning allows simultaneous operation of two furnaces and forces the indoor blower motors of each furnace to operate synchronously into a common duct system. Using the twinning function will require only field installed wiring with no external kits or parts. The staging and speed tap options must be set the same on both furnaces.

**NOTE:** Each furnace must be connected to it's own 115 VAC power supply. The L1 connection to each furnace must be in phase (connected to circuit breakers on the same 115 VAC service panel phase leg). To verify that the furnaces are in phase, check from L1 to L1 on each furnace with a voltme-ter. If the furnaces are in phase, the voltage between both furnaces will be ZERO.



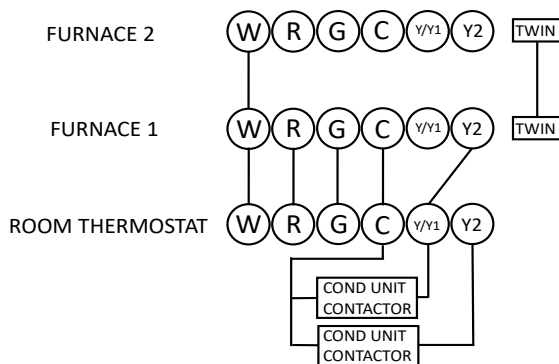


Figure 13

## 115 VOLT LINE CONNECTION OF ACCESSORIES (HUMIDIFIER AND ELECTRONIC AIR CLEANER)

The furnace integrated control module is equipped with line voltage accessory terminals for controlling power to an optional field-supplied humidifier and/or electronic air cleaner.


The accessory load specifications are noted in the chart:

|                        |                            |
|------------------------|----------------------------|
| Humidifier             | 1.0 Amp maximum at 120 VAC |
| Electronic Air Cleaner | 1.0 Amp maximum at 120 VAC |

Turn OFF power to the furnace before installing any accessories. Follow the humidifier or air cleaner manufacturers' instructions for locating, mounting, grounding, and controlling these accessories. Accessory wiring connections are to be made through the 1/4" quick connect terminals provided on the furnace integrated control module. The humidifier and electronic air cleaner hot terminals are identified as HUM H and EAC H. The humidifier and electronic air cleaner neutral terminals are identified as NEUTRAL. All field wiring must conform to applicable codes. Connections should be made as shown.

If it is necessary for the installer to supply additional line voltage wiring to the inside of the furnace, the wiring must conform to all local codes, and have a minimum temperature rating of 105°C. All line voltage wire splices must be made inside the furnace junction box.

The integrated control module humidifier terminal (HUM H) is energized with 115 volts whenever the induced draft blower is energized. The integrated control module electronic air cleaner terminal (EAC H) is energized with 115 volts whenever the circulator blower is energized. This terminal can also be used to provide 115 volt power to a humidifier transformer. The remaining primary transformer wire would be connected to the Line N on the control board.

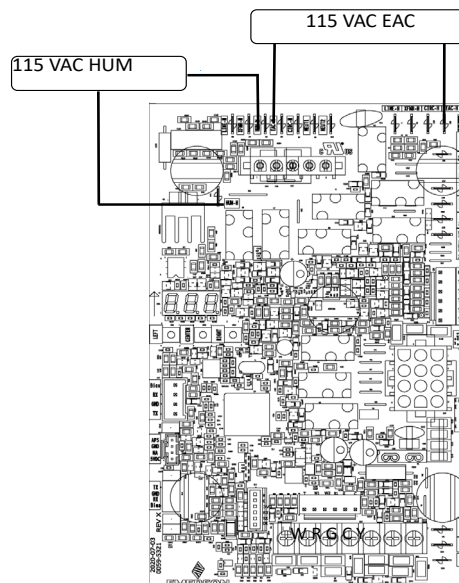


Accessories - Accessories Wiring  
Figure 14

## LOW VOLTAGE HUMIDIFIER

The furnace integrated control module is equipped with a low voltage terminal for providing power to an optional field-supplied 24 volt humidifier. The 24V HUM terminal is energized any time the draft inducer is powered. See connection diagram below.

**NOTE:** This is a 24 volt circuit only, the common connection must be on C terminal of the low voltage terminal strip (where thermostat wires are connected). Wiring for this circuit must NOT be connected to the line N location where line voltage neutral wires are connected.

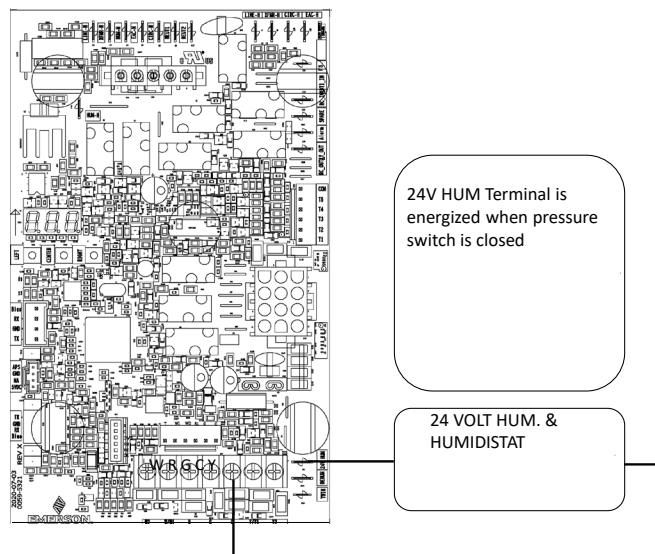

24 Volt Humidifier Connection  
Figure 15

**WARNING**

**HIGH VOLTAGE!**

TO AVOID PERSONAL INJURY OR DEATH DUE TO ELECTRICAL SHOCK, DISCONNECT ELECTRICAL POWER BEFORE SERVICING OR CHANGING ANY ELECTRICAL WIRING.

## FURNACE STARTUP

1. Close the manual gas shutoff valve external to the furnace.
2. Turn off the electrical power to the furnace.
3. Set the room thermostat to the lowest possible setting.
4. Remove the burner compartment door.

**NOTE:** This furnace is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.

5. Move the furnace gas valve manual control to the OFF position.
6. Wait five minutes then smell for gas. Be sure check near the floor as some types of gas are heavier than air.
7. If you smell gas after five minutes, immediately follow the safety instructions in the *Safety Considerations* on page 2 of this manual. If you do not smell gas after five minutes, move the furnace gas valve manual control to the ON position.
8. Replace the burner compartment door.
9. Open the manual gas shutoff valve external to the furnace.
10. Turn on the electrical power to the furnace.
11. Adjust the thermostat to a setting above room temperature.
12. After the burners are lit, set the thermostat to desired temperature.

## GAS HEAT SEQUENCE OF OPERATION

### Call for Heat

- On a call for heat, the thermostat contacts close & the control board receives 24 VAC on the W terminal.
- The control board microcomputer runs its self-check routine.
- The control verifies the limit switch is closed (24 VAC on Pin 8 of the 12 Pin connector).
- The control verifies that pressure switch circuit is open (0 VAC on Pin 5).
- The control module performs a gas valve circuitry check to verify gas valve relay state and presence of voltage at the valve.
- The system will energize the Induced draft blower.
- The pre-purge period begins once the pressure switch is detected closed (24 VAC on Pin 5).
- After the completion of pre-purge, the control will energize the igniter.
- After completion of the ignitor warm-up period:
- The gas valve is energized.
- The ignitor is de-energized as soon as flame is sensed.
- After 30 seconds the indoor blower is energized on heating speed.
- When the thermostat is satisfied:
- The gas valve is de-energized.
- The inducer remains energized for the post purge period (15 seconds).
- The indoor blower runs for the selected off delay period (90 seconds by default, adjustable from 30 – 180 seconds).

## HEATING MODE SPEED SELECTION

To change the main blower speed in HEATING mode, follow the following steps:

1. Press left or right button till LED displays “gA1 “(for single stage HEATING). Press center button and LED will display the selected speed number as Fxx (xx: Blower speed number).
2. The control shall rotate available speed number every time Left/Right switches are pressed. Table below shows the available speeds for Low & High heat mode.
3. When the center switch is pressed, the current displayed speed shall be selected, and control shall apply the newly selected speed in next heating call.

**NOTE:** Always refer to the Heating Chart to choose from available heating speeds

| THERMOSTAT CALL | AVAILABLE SPEEDS |
|-----------------|------------------|
| W/W1            | F01              |
|                 | F02 (DEFAULT)    |
|                 | F03              |
|                 | F04              |

Heating Speed Table for 1 Stage IFC

## CONTINUOUS FAN MODE SPEED SELECTION

To change the main blower speed in circulation mode, follow the following steps:

1. Press the left or right switch until LED displays “FSd”. Press the center switch and LED will display the selected speed number as Fxx (xx: Blower speed number from 1 to 9). F01 is the default speed for circulation.
2. The control will rotate available speed number every time left/right switches are pressed. All 9 speeds are available for circulation.
3. When the center switch is pressed, the current displayed speed will be selected, and control will immediately apply that speed setting.

| THERMOSTAT CALL | AVAILABLE SPEEDS |
|-----------------|------------------|
| G               | F01 (DEFAULT)    |
|                 | F02              |
|                 | F03              |
|                 | F04              |
|                 | F05              |
|                 | F06              |
|                 | F07              |
|                 | F08              |
|                 | F09              |

Circulation Speed Table

## COOLING MODE SEQUENCE OF OPERATION

### Low Stage Cooling Mode Sequence:

On a call for low stage cooling, the Y/Y1 or Y/Y1 and G thermostat contacts close signaling the furnace control board with 24 VAC on Y/Y1 or Y/Y1 and G terminals.

- The 7-Segment will display the cool mode: **1 R C**
- The compressor and condenser fan are energized.
- The circulator fan is energized at low cool speed after a cool on delay. The electronic air cleaner will also be energized.
- After the thermostat is satisfied, the compressor is de-energized and the Cool Mode Fan Off Delay period begins.
- Following the Cool Mode Fan Off Delay period, the cool circulator and air cleaner relay are de-energized.

### 2nd Stage Cooling Mode Sequence:

On a call for 2nd stage cooling, the Y2 or Y2 and G thermostat contacts close signaling the furnace control board with 24 VAC on Y2 or Y2 and G terminals.

- The 7-Segment will display the cool mode: **2 R C**
- The compressor and condenser fan are energized.
- The circulator fan is energized at cool speed after a cool on delay. The electronic air cleaner will also be energized.
- After the thermostat is satisfied, the compressor is de-energized and the Cool Mode Fan Off Delay period begins.
- Following the Cool Mode Fan Off Delay period, the cool circulator and air cleaner relay are de-energized

## COOLING MODE SPEED SELECTION

To change the main blower speed in COOLING mode, follow the following steps:

1. Press the left or right switch until LED displays "AC1" (for single stage COOLING) or "AC2" (for two-stage COOLING). Press the center switch and LED will display the selected speed number as Fxx (xx: Blower speed number from 1 to 9).
2. The control will rotate available speed number every time left/right switches are pressed. All 9 speeds are available for both Single and Two Stage cooling.
3. When the center switch is pressed, the current displayed speed will be selected, and control will apply the newly selected speed in next cooling call.

| THERMOSTAT CALL | AVAILABLE SPEEDS |
|-----------------|------------------|
| Y/Y1            | F01              |
|                 | F02              |
|                 | F03              |
|                 | F04 (DEFAULT)    |
|                 | F05              |
|                 | F06              |
|                 | F07              |
|                 | F08              |
|                 | F09              |

Single-Stage Cooling Speed Table for 2 Stage IFC

| THERMOSTAT CALL | AVAILABLE SPEEDS |
|-----------------|------------------|
| Y2              | F01              |
|                 | F02              |
|                 | F03              |
|                 | F04              |
|                 | F05 (DEFAULT)    |
|                 | F06              |
|                 | F07              |
|                 | F08              |
|                 | F09              |


Two-Stage Cooling Speed Table for 2 Stage IFC

## FURNACE SHUTDOWN


1. Set the thermostat to the lowest setting. The integrated control will close the gas valve and extinguish flame. Following a 15 second delay, the induced draft blower will be de-energized. After the blower off delay time expires, the blower de-energizes.
2. Remove the burner compartment door and move the furnace gas valve manual control to the OFF position.
3. Close the manual gas shutoff valve external to the furnace.
4. Replace the burner compartment door.

## GAS SUPPLY PRESSURE MEASUREMENT

Gas Valve ON/OFF Selector Switch

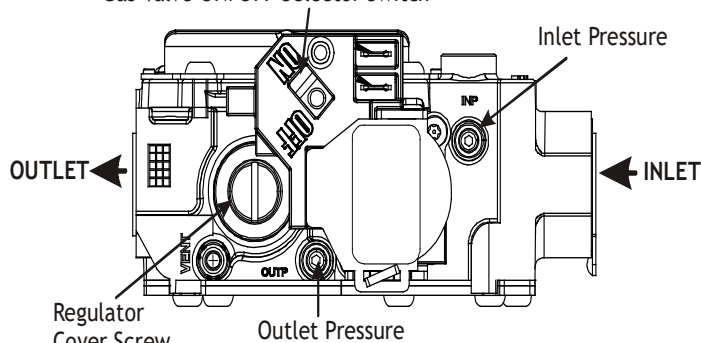

White-Rogers Model 36J22Y-204  
Figure 16

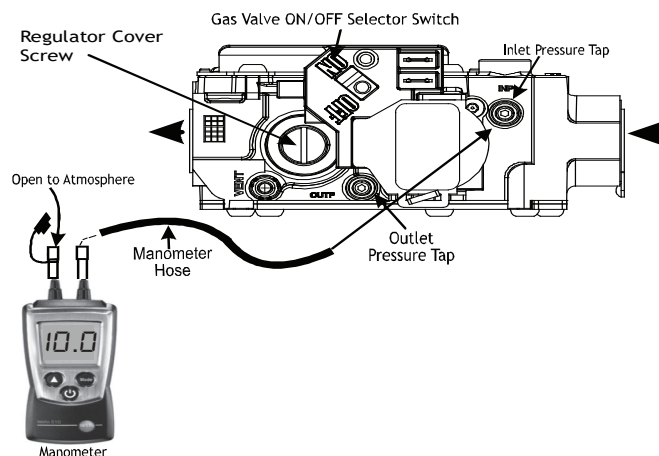

White-Rogers Model 36J22Y-204 Connected to Manometer  
Figure 17

| INLET GAS SUPPLY PRESSURE |                     |                     |
|---------------------------|---------------------|---------------------|
| Natural Gas               | Minimum: 4.5" w.c.  | Maximum: 10.0" w.c. |
| Propane Gas               | Minimum: 11.0" w.c. | Maximum: 13.0" w.c. |



## CAUTION

TO PREVENT UNRELIABLE OPERATION OR EQUIPMENT DAMAGE, THE GAS MANIFOLD PRESSURE MUST BE AS SPECIFIED ON THE UNIT RATING PLATE WITH ALL OTHER HOUSEHOLD GAS FIRED APPLIANCES OPERATING.

The line pressure supplied to the gas valve must be within the range specified below. The supply pressure can be measured at the gas valve inlet pressure tap or at a hose fitting installed in the gas piping drip leg. The supply pressure must be measured with the burners operating. To measure the gas supply pressure, use the following procedure.

1. Turn OFF gas to furnace at the manual gas shutoff valve external to the furnace.
2. Connect a calibrated manometer (or appropriate gas pressure gauge) at either the gas valve inlet pressure tap or the gas piping drip leg. See White-Rodgers 36J54 gas valve (Figure 17) to locate the inlet pressure tap.

**NOTE:** If using the inlet pressure tap on the White-Rodgers 36J54 gas valve, then use the 36G/J Valve Pressure Check Kit, Part No. 0151K00000S.

3. Turn ON the gas supply and operate the furnace and all other gas consuming appliances on the same gas supply line.
4. Measure furnace gas supply pressure with burners firing. Supply pressure must be within the range specified in the *Inlet Gas Supply Pressure* table.

If supply pressure differs from table, make the necessary adjustments to pressure regulator, gas piping size, etc., and/or consult with local gas utility.

5. Turn OFF gas to furnace at the manual shutoff valve and disconnect manometer. Reinstall plug before turning on gas to furnace.
6. Turn OFF any unnecessary gas appliances stated in step three.

## GAS MANIFOLD PRESSURE MEASUREMENT AND ADJUSTMENT




## CAUTION

TO PREVENT UNRELIABLE OPERATION OR EQUIPMENT DAMAGE, THE GAS MANIFOLD PRESSURE MUST BE AS SPECIFIED ON THE UNIT RATING PLATE. ONLY MINOR ADJUSTMENTS SHOULD BE MADE BY ADJUSTING THE GAS VALVE PRESSURE REGULATOR.

Only small variations in gas pressure should be made by adjusting the gas valve pressure regulator. The manifold pressure must be measured with the burners operating. To measure and adjust the manifold pressure, use the following procedure.

1. Turn OFF gas to furnace at the manual gas shutoff valve external to the furnace.

2. Turn off all electrical power to the system.
3. Outlet pressure tap connections:  
White-Rodgers 36J54 valve: Back outlet pressure test screw (inlet/outlet pressure tap) out one turn (counterclockwise, not more than one turn).
4. Attach a hose and manometer to outlet pressure tap.
5. Turn ON the gas supply.

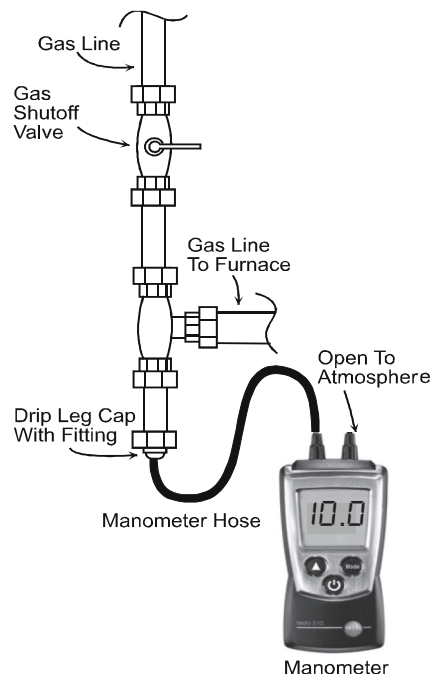

Measuring Inlet Gas Pressure (Alt. Method)  
Figure 18

**NOTE:** When converting from natural gas to L.P. consult your distributor for proper conversion kit.

| Manifold Gas Pressure |            |                  |            |
|-----------------------|------------|------------------|------------|
| Gas                   |            | Range            | Nominal    |
| Natural               | High Stage | 3.2 - 3.8" w.c.  | 3.5" w.c.  |
| Propane               | High Stage | 9.7 - 10.3" w.c. | 10.0" w.c. |



| MODEL        | THERMOSTAT CALL | TAP # | LOW STAGE COOLING AIFLOW                        |      |      |      |      |      |      |      |
|--------------|-----------------|-------|---|------|------|------|------|------|------|------|
|              |                 |       | EXTERNAL STATIC PRESSURE, (INCHES WATER COLUMN) |      |      |      |      |      |      |      |
|              |                 |       | 0.1   | 0.2  | 0.3  | 0.4  | 0.5  | 0.6  | 0.7  | 0.8  |
|              |                 |       | CFM   | CFM  | CFM  | CFM  | CFM  | CFM  | CFM  | CFM  |
| *M9S800403A* | Y/Y1            | F01   | 658   | 585  | 545  | 495  | 444  | 390  | 332  | 151  |
|              |                 | F02   | 749   | 697  | 652  | 607  | 554  | 509  | 459  | 406  |
|              |                 | F03   | 925   | 881  | 840  | 800  | 760  | 721  | 681  | 645  |
|              |                 | F04^  | 882   | 841  | 800  | 760  | 719  | 678  | 641  | 602  |
|              |                 | F05   | 1330  | 1295 | 1273 | 1251 | 1223 | 1195 | 1168 | 1142 |
|              |                 | F06   | 1130  | 1090 | 1059 | 1022 | 991  | 957  | 926  | 895  |
|              |                 | F07   | 1158  | 1113 | 1090 | 1057 | 1024 | 996  | 964  | 935  |
|              |                 | F08   | 1270  | 1235 | 1208 | 1179 | 1147 | 1119 | 1088 | 1060 |
|              |                 | F09   | 1417  | 1380 | 1359 | 1336 | 1314 | 1288 | 1261 | 1238 |
| *M9S800603A* | Y/Y1            | F01   | 659   | 599  | 542  | 490  | 437  | 383  | 320  | N/A  |
|              |                 | F02   | 1268  | 1221 | 1188 | 1154 | 1122 | 1091 | 1060 | 1029 |
|              |                 | F03   | 1087  | 1044 | 1008 | 973  | 938  | 905  | 871  | 841  |
|              |                 | F04^  | 1118  | 1070 | 1033 | 997  | 963  | 929  | 896  | 865  |
|              |                 | F05   | 1308  | 1262 | 1224 | 1197 | 1167 | 1141 | 1117 | 1089 |
|              |                 | F06   | 868   | 823  | 780  | 741  | 699  | 662  | 624  | 584  |
|              |                 | F07   | 922   | 877  | 835  | 795  | 757  | 718  | 679  | 642  |
|              |                 | F08   | 1382  | 1341 | 1311 | 1291 | 1263 | 1234 | 1206 | 1177 |
|              |                 | F09   | 1492  | 1448 | 1409 | 1381 | 1354 | 1332 | 1310 | 1288 |
| *M9S800603B* | Y/Y1            | F01   | 720   | 660  | 614  | 542  | 468  | 413  | 359  | 313  |
|              |                 | F02   | 1289  | 1260 | 1232 | 1194 | 1161 | 1125 | 1087 | 1073 |
|              |                 | F03   | 1125  | 1089 | 1052 | 1013 | 973  | 947  | 909  | 863  |
|              |                 | F04^  | 1252  | 1198 | 1153 | 1110 | 1069 | 1028 | 990  | 953  |
|              |                 | F05   | 922   | 872  | 830  | 786  | 736  | 683  | 616  | 565  |
|              |                 | F06   | 1146  | 1113 | 1076 | 1039 | 1002 | 969  | 933  | 891  |
|              |                 | F07   | 1370  | 1345 | 1317 | 1286 | 1260 | 1224 | 1187 | 1168 |
|              |                 | F08   | 1413  | 1386 | 1360 | 1330 | 1302 | 1270 | 1242 | 1211 |
|              |                 | F09   | 1544  | 1500 | 1459 | 1419 | 1387 | 1349 | 1317 | 1286 |
| *M9S800604B* | Y/Y1            | F01   | 764   | 695  | 630  | 559  | 485  | 415  | 358  | N/A  |
|              |                 | F02   | 1287  | 1235 | 1191 | 1147 | 1104 | 1062 | 1020 | 979  |
|              |                 | F03   | 1339  | 1301 | 1258 | 1217 | 1174 | 1131 | 1090 | 1048 |
|              |                 | F04^  | 1396  | 1346 | 1298 | 1257 | 1217 | 1175 | 1135 | 1098 |
|              |                 | F05   | 1185  | 1135 | 1088 | 1040 | 992  | 947  | 901  | 855  |
|              |                 | F06   | 1500  | 1460 | 1420 | 1360 | 1380 | 1294 | 1256 | 1219 |
|              |                 | F07   | 1591  | 1539 | 1493 | 1454 | 1416 | 1379 | 1347 | 1311 |
|              |                 | F08   | 1675  | 1622 | 1583 | 1545 | 1510 | 1474 | 1440 | 1402 |
|              |                 | F09   | 1790  | 1741 | 1701 | 1668 | 1631 | 1599 | 1567 | 1532 |
| *M9S800803B* | Y/Y1            | F01   | 710   | 646  | 580  | 515  | 432  | 367  | 314  | 274  |
|              |                 | F02   | 1298  | 1255 | 1216 | 1178 | 1140 | 1102 | 1067 | 1028 |
|              |                 | F03   | 1209  | 1166 | 1124 | 1083 | 1045 | 1005 | 964  | 923  |
|              |                 | F04^  | 1138  | 1091 | 1045 | 1001 | 959  | 920  | 876  | 832  |
|              |                 | F05   | 1391  | 1352 | 1314 | 1278 | 1241 | 1209 | 1175 | 1140 |
|              |                 | F06   | 977   | 931  | 880  | 836  | 785  | 734  | 683  | 626  |
|              |                 | F07   | 1036  | 985  | 940  | 895  | 848  | 799  | 751  | 705  |
|              |                 | F08   | 1456  | 1414 | 1376 | 1341 | 1302 | 1270 | 1238 | 1200 |
|              |                 | F09   | 1533  | 1488 | 1452 | 1415 | 1383 | 1350 | 1317 | 1286 |
| *M9S800804B* | Y/Y1            | F01   | 841   | 657  | 595  | 522  | 439  | 367  | 315  | N/A  |
|              |                 | F02   | 1141  | 1089 | 1045 | 1001 | 958  | 914  | 869  | 823  |
|              |                 | F03   | 1311  | 1267 | 1226 | 1189 | 1150 | 1114 | 1072 | 1034 |
|              |                 | F04^  | 1395  | 1347 | 1309 | 1270 | 1233 | 1199 | 1164 | 1125 |
|              |                 | F05   | 1490  | 1447 | 1407 | 1373 | 1336 | 1303 | 1269 | 1237 |
|              |                 | F06   | 1553  | 1510 | 1469 | 1435 | 1401 | 1368 | 1335 | 1300 |
|              |                 | F07   | 1593  | 1548 | 1508 | 1474 | 1440 | 1409 | 1376 | 1343 |
|              |                 | F08   | 1776  | 1735 | 1695 | 1661 | 1628 | 1601 | 1570 | 1542 |
|              |                 | F09   | 1853  | 1812 | 1773 | 1739 | 1708 | 1679 | 1650 | 1623 |
| *M9S800804C* | Y/Y1            | F01   | 831   | 750  | 671  | 588  | 501  | 405  | 348  | 300  |
|              |                 | F02   | 1214  | 1158 | 1103 | 1045 | 989  | 936  | 883  | 823  |
|              |                 | F03   | 1303  | 1249 | 1191 | 1136 | 1081 | 1028 | 974  | 928  |
|              |                 | F04^  | 1426  | 1375 | 1324 | 1277 | 1229 | 1177 | 1124 | 1078 |
|              |                 | F05   | 1518  | 1465 | 1418 | 1372 | 1328 | 1284 | 1237 | 1195 |
|              |                 | F06   | 1588  | 1539 | 1494 | 1447 | 1401 | 1358 | 1313 | 1267 |
|              |                 | F07   | 1710  | 1666 | 1632 | 1595 | 1554 | 1512 | 1473 | 1431 |
|              |                 | F08   | 1785  | 1751 | 1717 | 1675 | 1639 | 1596 | 1557 | 1516 |
|              |                 | F09   | 1845  | 1805 | 1771 | 1733 | 1695 | 1655 | 1618 | 1576 |
| *M9S800805C* | Y/Y1            | F01   | 837   | 752  | 671  | 576  | 501  | 426  | 361  | 315  |
|              |                 | F02   | 1316  | 1270 | 1218 | 1166 | 1114 | 1061 | 1000 | 962  |
|              |                 | F03   | 1353  | 1323 | 1286 | 1235 | 1183 | 1131 | 1085 | 1040 |
|              |                 | F04^  | 1587  | 1544 | 1506 | 1459 | 1416 | 1372 | 1323 | 1281 |
|              |                 | F05   | 1731  | 1673 | 1632 | 1587 | 1546 | 1506 | 1463 | 1421 |
|              |                 | F06   | 1794  | 1744 | 1709 | 1671 | 1632 | 1591 | 1555 | 1513 |
|              |                 | F07   | 1861  | 1805 | 1761 | 1720 | 1681 | 1642 | 1603 | 1565 |
|              |                 | F08   | 1910  | 1873 | 1839 | 1798 | 1761 | 1723 | 1686 | 1648 |
|              |                 | F09   | 2110  | 2055 | 2035 | 2003 | 1973 | 1946 | 1907 | 1890 |
| *M9S801005C* | Y/Y1            | F01   | 802   | 724  | 637  | 551  | 468  | 389  | 342  | 294  |
|              |                 | F02   | 1405  | 1356 | 1308 | 1262 | 1210 | 1182 | 1155 | 1102 |
|              |                 | F03   | 1574  | 1531 | 1484 | 1440 | 1392 | 1357 | 1306 | 1256 |
|              |                 | F04^  | 1619  | 1575 | 1526 | 1489 | 1446 | 1404 | 1355 | 1313 |
|              |                 | F05   | 1688  | 1641 | 1600 | 1557 | 1513 | 1477 | 1428 | 1381 |
|              |                 | F06   | 1811  | 1769 | 1730 | 1686 | 1649 | 1610 | 1572 | 1525 |
|              |                 | F07   | 1857  | 1812 | 1774 | 1733 | 1697 | 1662 | 1622 | 1586 |
|              |                 | F08   | 1892  | 1850 | 1805 | 1774 | 1735 | 1692 | 1658 | 1621 |
|              |                 | F09   | 2116  | 2073 | 2039 | 2005 | 1981 | 1945 | 1909 | 1879 |
| *M9S801205D* | Y/Y1            | F01   | 851   | 774  | 692  | 615  | 535  | 470  | 411  | 359  |
|              |                 | F02   | 1677  | 1629 | 1583 | 1540 | 1498 | 1449 | 1399 | 1349 |
|              |                 | F03   | 1537  | 1489 | 1444 | 1404 | 1365 | 1322 | 1272 | 1211 |
|              |                 | F04^  | 1416  | 1365 | 1315 | 1267 | 1220 | 1163 | 1106 | 1048 |
|              |                 | F05   | 1154  | 1098 | 1043 | 983  | 932  | 874  | 819  | 755  |
|              |                 | F06   | 1806  | 1764 | 1729 | 1688 | 1654 | 1615 | 1578 | 1535 |
|              |                 | F07   | 1869  | 1816 | 1773 | 1731 | 1693 | 1661 | 1629 | 1589 |
|              |                 | F08   | 1947  | 1903 | 1865 | 1833 | 1802 | 1769 | 1743 | 1708 |
|              |                 | F09   | 2107  | 2066 | 2030 | 1996 | 1963 | 1932 | 1899 | 1867 |

NOTE:  
^ Default Speed

|              |                 |       | HIGH STAGE COOLING AIFLOW                       |      |      |      |      |      |      |      |
|--------------|-----------------|-------|---|------|------|------|------|------|------|------|
| MODEL        | THERMOSTAT CALL | TAP # | EXTERNAL STATIC PRESSURE, (INCHES WATER COLUMN) |      |      |      |      |      |      |      |
|              |                 |       | 0.1   | 0.2  | 0.3  | 0.4  | 0.5  | 0.6  | 0.7  | 0.8  |
|              |                 |       | CFM   | CFM  | CFM  | CFM  | CFM  | CFM  | CFM  | CFM  |
| *M9S800403A* | Y2              | F01   | 658   | 585  | 545  | 495  | 444  | 390  | 332  | 151  |
|              |                 | F02   | 749   | 697  | 652  | 607  | 554  | 509  | 459  | 406  |
|              |                 | F03   | 925   | 881  | 840  | 800  | 760  | 721  | 681  | 645  |
|              |                 | F04   | 882   | 841  | 800  | 760  | 719  | 678  | 641  | 602  |
|              |                 | F05^  | 1330  | 1295 | 1273 | 1251 | 1223 | 1195 | 1168 | 1142 |
|              |                 | F06   | 1130  | 1090 | 1059 | 1022 | 991  | 957  | 926  | 895  |
|              |                 | F07   | 1158  | 1113 | 1090 | 1057 | 1024 | 996  | 964  | 935  |
|              |                 | F08   | 1270  | 1235 | 1208 | 1179 | 1147 | 1119 | 1088 | 1060 |
|              |                 | F09   | 1417  | 1380 | 1359 | 1336 | 1314 | 1288 | 1261 | 1238 |
|              |                 | F01   | 659   | 599  | 542  | 490  | 437  | 383  | 320  | N/A  |
| *M9S800603A* | Y2              | F02   | 1268  | 1221 | 1188 | 1154 | 1122 | 1091 | 1060 | 1029 |
|              |                 | F03   | 1087  | 1044 | 1008 | 973  | 938  | 905  | 871  | 841  |
|              |                 | F04   | 1118  | 1070 | 1033 | 997  | 963  | 929  | 896  | 865  |
|              |                 | F05^  | 1308  | 1262 | 1224 | 1197 | 1167 | 1141 | 1117 | 1089 |
|              |                 | F06   | 868   | 823  | 780  | 741  | 699  | 662  | 624  | 584  |
|              |                 | F07   | 922   | 877  | 835  | 795  | 757  | 718  | 679  | 642  |
|              |                 | F08   | 1382  | 1341 | 1311 | 1291 | 1263 | 1234 | 1206 | 1177 |
|              |                 | F09   | 1492  | 1448 | 1409 | 1381 | 1354 | 1332 | 1310 | 1288 |
|              |                 | F01   | 720   | 660  | 614  | 542  | 468  | 413  | 359  | 313  |
|              |                 | F02   | 1289  | 1260 | 1232 | 1194 | 1161 | 1125 | 1087 | 1073 |
| *M9S800603B* | Y2              | F03   | 1125  | 1089 | 1052 | 1013 | 973  | 947  | 909  | 863  |
|              |                 | F04   | 1252  | 1198 | 1153 | 1110 | 1069 | 1028 | 990  | 953  |
|              |                 | F05^  | 922   | 872  | 830  | 786  | 736  | 683  | 616  | 565  |
|              |                 | F06   | 1146  | 1113 | 1076 | 1039 | 1002 | 969  | 933  | 891  |
|              |                 | F07   | 1370  | 1345 | 1317 | 1286 | 1260 | 1224 | 1187 | 1168 |
|              |                 | F08   | 1413  | 1386 | 1360 | 1330 | 1302 | 1270 | 1242 | 1211 |
|              |                 | F09   | 1544  | 1500 | 1459 | 1419 | 1387 | 1349 | 1317 | 1286 |
|              |                 | F01   | 764   | 695  | 630  | 559  | 485  | 415  | 358  | N/A  |
|              |                 | F02   | 1287  | 1235 | 1191 | 1147 | 1104 | 1062 | 1020 | 979  |
|              |                 | F03   | 1339  | 1301 | 1258 | 1217 | 1174 | 1131 | 1090 | 1048 |
| *M9S800604B* | Y2              | F04   | 1396  | 1346 | 1298 | 1257 | 1217 | 1175 | 1135 | 1098 |
|              |                 | F05^  | 1185  | 1135 | 1088 | 1040 | 992  | 947  | 901  | 855  |
|              |                 | F06   | 1500  | 1460 | 1420 | 1360 | 1380 | 1294 | 1256 | 1219 |
|              |                 | F07   | 1591  | 1539 | 1493 | 1454 | 1416 | 1379 | 1347 | 1311 |
|              |                 | F08   | 1675  | 1622 | 1583 | 1545 | 1510 | 1474 | 1440 | 1402 |
|              |                 | F09   | 1790  | 1741 | 1701 | 1668 | 1631 | 1599 | 1567 | 1532 |
|              |                 | F01   | 710   | 646  | 580  | 515  | 432  | 367  | 314  | 274  |
|              |                 | F02   | 1298  | 1255 | 1216 | 1178 | 1140 | 1102 | 1067 | 1028 |
|              |                 | F03   | 1209  | 1166 | 1124 | 1083 | 1045 | 1005 | 964  | 923  |
|              |                 | F04   | 1138  | 1091 | 1045 | 1001 | 959  | 920  | 876  | 832  |
| *M9S800803B* | Y2              | F05^  | 1391  | 1352 | 1314 | 1278 | 1241 | 1209 | 1175 | 1140 |
|              |                 | F06   | 977   | 931  | 880  | 836  | 785  | 734  | 683  | 626  |
|              |                 | F07   | 1036  | 985  | 940  | 895  | 848  | 799  | 751  | 705  |
|              |                 | F08   | 1456  | 1414 | 1376 | 1341 | 1302 | 1270 | 1238 | 1200 |
|              |                 | F09   | 1533  | 1488 | 1452 | 1415 | 1383 | 1350 | 1317 | 1286 |
|              |                 | F01   | 841   | 657  | 595  | 522  | 439  | 367  | 315  | N/A  |
|              |                 | F02   | 1141  | 1089 | 1045 | 1001 | 958  | 914  | 869  | 823  |
|              |                 | F03   | 1311  | 1267 | 1226 | 1189 | 1150 | 1114 | 1072 | 1034 |
|              |                 | F04   | 1395  | 1347 | 1309 | 1270 | 1233 | 1199 | 1164 | 1125 |
|              |                 | F05^  | 1490  | 1447 | 1407 | 1373 | 1336 | 1303 | 1269 | 1237 |
| *M9S800804B* | Y2              | F06   | 1553  | 1510 | 1469 | 1435 | 1401 | 1368 | 1335 | 1300 |
|              |                 | F07   | 1593  | 1548 | 1508 | 1474 | 1440 | 1409 | 1376 | 1343 |
|              |                 | F08   | 1776  | 1735 | 1695 | 1661 | 1628 | 1601 | 1570 | 1542 |
|              |                 | F09   | 1853  | 1812 | 1773 | 1739 | 1708 | 1679 | 1650 | 1623 |
|              |                 | F01   | 831   | 750  | 671  | 588  | 501  | 405  | 348  | 300  |
|              |                 | F02   | 1214  | 1158 | 1103 | 1045 | 989  | 936  | 883  | 823  |
|              |                 | F03   | 1303  | 1249 | 1191 | 1136 | 1081 | 1028 | 974  | 928  |
|              |                 | F04   | 1426  | 1375 | 1324 | 1277 | 1229 | 1177 | 1124 | 1078 |
|              |                 | F05^  | 1518  | 1465 | 1418 | 1372 | 1328 | 1284 | 1237 | 1195 |
|              |                 | F06   | 1588  | 1539 | 1494 | 1447 | 1401 | 1358 | 1313 | 1267 |
| *M9S800804C* | Y2              | F07   | 1710  | 1666 | 1632 | 1595 | 1554 | 1512 | 1473 | 1431 |
|              |                 | F08   | 1785  | 1751 | 1717 | 1675 | 1639 | 1596 | 1557 | 1516 |
|              |                 | F09   | 1845  | 1805 | 1771 | 1733 | 1695 | 1655 | 1618 | 1576 |
|              |                 | F01   | 837   | 752  | 671  | 576  | 501  | 426  | 361  | 315  |
|              |                 | F02   | 1316  | 1270 | 1218 | 1166 | 1114 | 1061 | 1000 | 962  |
|              |                 | F03   | 1353  | 1323 | 1286 | 1235 | 1183 | 1131 | 1085 | 1040 |
|              |                 | F04   | 1587  | 1544 | 1506 | 1459 | 1416 | 1372 | 1323 | 1281 |
|              |                 | F05^  | 1731  | 1673 | 1632 | 1587 | 1546 | 1506 | 1463 | 1421 |
|              |                 | F06   | 1794  | 1744 | 1709 | 1671 | 1632 | 1591 | 1555 | 1513 |
|              |                 | F07   | 1861  | 1805 | 1761 | 1720 | 1681 | 1642 | 1603 | 1565 |
| *M9S800805C* | Y2              | F08   | 1910  | 1873 | 1839 | 1798 | 1761 | 1723 | 1686 | 1648 |
|              |                 | F09   | 2110  | 2055 | 2035 | 2003 | 1973 | 1946 | 1907 | 1890 |
|              |                 | F01   | 802   | 724  | 637  | 551  | 468  | 389  | 342  | 294  |
|              |                 | F02   | 1405  | 1356 | 1308 | 1262 | 1210 | 1182 | 1155 | 1102 |
|              |                 | F03   | 1574  | 1531 | 1484 | 1440 | 1392 | 1357 | 1306 | 1256 |
|              |                 | F04   | 1619  | 1575 | 1526 | 1489 | 1446 | 1404 | 1355 | 1313 |
|              |                 | F05^  | 1688  | 1641 | 1600 | 1557 | 1513 | 1477 | 1428 | 1381 |
|              |                 | F06   | 1811  | 1769 | 1730 | 1686 | 1649 | 1610 | 1572 | 1525 |
|              |                 | F07   | 1857  | 1812 | 1774 | 1733 | 1697 | 1662 | 1622 | 1586 |
|              |                 | F08   | 1892  | 1850 | 1805 | 1774 | 1735 | 1692 | 1658 | 1621 |
| *M9S801005C* | Y2              | F09   | 2116  | 2073 | 2039 | 2005 | 1981 | 1945 | 1909 | 1879 |
|              |                 | F01   | 851   | 774  | 692  | 615  | 535  | 470  | 411  | 359  |
|              |                 | F02   | 1677  | 1629 | 1583 | 1540 | 1498 | 1449 | 1399 | 1349 |
|              |                 | F03   | 1537  | 1489 | 1444 | 1404 | 1365 | 1322 | 1272 | 1211 |
|              |                 | F04   | 1416  | 1365 | 1315 | 1267 | 1220 | 1163 | 1106 | 1048 |
|              |                 | F05^  | 1154  | 1098 | 1043 | 983  | 932  | 874  | 819  | 755  |
|              |                 | F06   | 1806  | 1764 | 1729 | 1688 | 1654 | 1615 | 1578 | 1535 |
|              |                 | F07   | 1869  | 1816 | 1773 | 1731 | 1693 | 1661 | 1629 | 1589 |
|              |                 | F08   | 1947  | 1903 | 1865 | 1833 | 1802 | 1769 | 1743 | 1708 |
|              |                 | F09   | 2107  | 2066 | 2030 | 1996 | 1963 | 1932 | 1899 | 1867 |
| *M9S801205D* | Y2              | F01   | 851   | 774  | 692  | 615  | 535  | 470  | 411  | 359  |
|              |                 | F02   | 1677  | 1629 | 1583 | 1540 | 1498 | 1449 | 1399 | 1349 |
|              |                 | F03   | 1537  | 1489 | 1444 | 1404 | 1365 | 1322 | 1272 | 1211 |
|              |                 | F04   | 1416  | 1365 | 1315 | 1267 | 1220 | 1163 | 1106 | 1048 |
|              |                 | F05^  | 1154  | 1098 | 1043 | 983  | 932  | 874  | 819  | 755  |
|              |                 | F06   | 1806  | 1764 | 1729 | 1688 | 1654 | 1615 | 1578 | 1535 |
|              |                 | F07   | 1869  | 1816 | 1773 | 1731 | 1693 | 1661 | 1629 | 1589 |
|              |                 | F08   | 1947  | 1903 | 1865 | 1833 | 1802 | 1769 | 1743 | 1708 |
|              |                 | F09   | 2107  | 2066 | 2030 | 1996 | 1963 | 1932 | 1899 | 1867 |

**NOTE:**  
^ Default Speed

|              |                 |       | CIRCULATION AIRFLOW                             |      |      |      |      |      |      |      |
|--------------|-----------------|-------|---|------|------|------|------|------|------|------|
| MODEL        | THERMOSTAT CALL | TAP # | EXTERNAL STATIC PRESSURE, (INCHES WATER COLUMN) |      |      |      |      |      |      |      |
|              |                 |       | 0.1   | 0.2  | 0.3  | 0.4  | 0.5  | 0.6  | 0.7  | 0.8  |
|              |                 |       | CFM   | CFM  | CFM  | CFM  | CFM  | CFM  | CFM  | CFM  |
| *M9S800403A* | G               | F01   | 658   | 585  | 545  | 495  | 444  | 390  | 332  | 151  |
|              |                 | F02   | 749   | 697  | 652  | 607  | 554  | 509  | 459  | 406  |
|              |                 | F03   | 925   | 881  | 840  | 800  | 760  | 721  | 681  | 645  |
|              |                 | F04   | 882   | 841  | 800  | 760  | 719  | 678  | 641  | 602  |
|              |                 | F05   | 1330  | 1295 | 1273 | 1251 | 1223 | 1195 | 1168 | 1142 |
|              |                 | F06   | 1130  | 1090 | 1059 | 1022 | 991  | 957  | 926  | 895  |
|              |                 | F07   | 1158  | 1113 | 1090 | 1057 | 1024 | 996  | 964  | 935  |
|              |                 | F08   | 1270  | 1235 | 1208 | 1179 | 1147 | 1119 | 1088 | 1060 |
|              |                 | F09   | 1417  | 1380 | 1359 | 1336 | 1314 | 1288 | 1261 | 1238 |
| *M9S800603A* | G               | F01   | 659   | 599  | 542  | 490  | 437  | 383  | 320  | N/A  |
|              |                 | F02   | 1268  | 1221 | 1188 | 1154 | 1122 | 1091 | 1060 | 1029 |
|              |                 | F03   | 1087  | 1044 | 1008 | 973  | 938  | 905  | 871  | 841  |
|              |                 | F04   | 1118  | 1070 | 1033 | 997  | 963  | 929  | 896  | 865  |
|              |                 | F05   | 1308  | 1262 | 1224 | 1197 | 1167 | 1141 | 1117 | 1089 |
|              |                 | F06   | 868   | 823  | 780  | 741  | 699  | 662  | 624  | 584  |
|              |                 | F07   | 922   | 877  | 835  | 795  | 757  | 718  | 679  | 642  |
|              |                 | F08   | 1382  | 1341 | 1311 | 1291 | 1263 | 1234 | 1206 | 1177 |
|              |                 | F09   | 1492  | 1448 | 1409 | 1381 | 1354 | 1332 | 1310 | 1288 |
| *M9S800603B* | G               | F01   | 720   | 660  | 614  | 542  | 468  | 413  | 359  | 313  |
|              |                 | F02   | 1289  | 1260 | 1232 | 1194 | 1161 | 1125 | 1087 | 1073 |
|              |                 | F03   | 1125  | 1089 | 1052 | 1013 | 973  | 947  | 909  | 863  |
|              |                 | F04   | 1252  | 1198 | 1153 | 1110 | 1069 | 1028 | 990  | 953  |
|              |                 | F05   | 922   | 872  | 830  | 786  | 736  | 683  | 616  | 565  |
|              |                 | F06   | 1146  | 1113 | 1076 | 1039 | 1002 | 969  | 933  | 891  |
|              |                 | F07   | 1370  | 1345 | 1317 | 1286 | 1260 | 1224 | 1187 | 1168 |
|              |                 | F08   | 1413  | 1386 | 1360 | 1330 | 1302 | 1270 | 1242 | 1211 |
|              |                 | F09   | 1544  | 1500 | 1459 | 1419 | 1387 | 1349 | 1317 | 1286 |
| *M9S800604B* | G               | F01   | 764   | 695  | 630  | 559  | 485  | 415  | 358  | N/A  |
|              |                 | F02   | 1287  | 1235 | 1191 | 1147 | 1104 | 1062 | 1020 | 979  |
|              |                 | F03   | 1339  | 1301 | 1258 | 1217 | 1174 | 1131 | 1090 | 1048 |
|              |                 | F04   | 1396  | 1346 | 1298 | 1257 | 1217 | 1175 | 1135 | 1098 |
|              |                 | F05   | 1185  | 1135 | 1088 | 1040 | 992  | 947  | 901  | 855  |
|              |                 | F06   | 1500  | 1460 | 1420 | 1360 | 1380 | 1294 | 1256 | 1219 |
|              |                 | F07   | 1591  | 1539 | 1493 | 1454 | 1416 | 1379 | 1347 | 1311 |
|              |                 | F08   | 1675  | 1622 | 1583 | 1545 | 1510 | 1474 | 1440 | 1402 |
|              |                 | F09   | 1790  | 1741 | 1701 | 1668 | 1631 | 1599 | 1567 | 1532 |
| *M9S800803B* | G               | F01   | 710   | 646  | 580  | 515  | 432  | 367  | 314  | 274  |
|              |                 | F02   | 1298  | 1255 | 1216 | 1178 | 1140 | 1102 | 1067 | 1028 |
|              |                 | F03   | 1209  | 1166 | 1124 | 1083 | 1045 | 1005 | 964  | 923  |
|              |                 | F04   | 1138  | 1091 | 1045 | 1001 | 959  | 920  | 876  | 832  |
|              |                 | F05   | 1391  | 1352 | 1314 | 1278 | 1241 | 1209 | 1175 | 1140 |
|              |                 | F06   | 977   | 931  | 880  | 836  | 785  | 734  | 683  | 626  |
|              |                 | F07   | 1036  | 985  | 940  | 895  | 848  | 799  | 751  | 705  |
|              |                 | F08   | 1456  | 1414 | 1376 | 1341 | 1302 | 1270 | 1238 | 1200 |
|              |                 | F09   | 1533  | 1488 | 1452 | 1415 | 1383 | 1350 | 1317 | 1286 |
| *M9S800804B* | G               | F01   | 841   | 657  | 595  | 522  | 439  | 367  | 315  | N/A  |
|              |                 | F02   | 1141  | 1089 | 1045 | 1001 | 958  | 914  | 869  | 823  |
|              |                 | F03   | 1311  | 1267 | 1226 | 1189 | 1150 | 1114 | 1072 | 1034 |
|              |                 | F04   | 1395  | 1347 | 1309 | 1270 | 1233 | 1199 | 1164 | 1125 |
|              |                 | F05   | 1490  | 1447 | 1407 | 1373 | 1336 | 1303 | 1269 | 1237 |
|              |                 | F06   | 1553  | 1510 | 1469 | 1435 | 1401 | 1368 | 1335 | 1300 |
|              |                 | F07   | 1593  | 1548 | 1508 | 1474 | 1440 | 1409 | 1376 | 1343 |
|              |                 | F08   | 1776  | 1735 | 1695 | 1661 | 1628 | 1601 | 1570 | 1542 |
|              |                 | F09   | 1853  | 1812 | 1773 | 1739 | 1708 | 1679 | 1650 | 1623 |
| *M9S800804C* | G               | F01   | 831   | 750  | 671  | 588  | 501  | 405  | 348  | 300  |
|              |                 | F02   | 1214  | 1158 | 1103 | 1045 | 989  | 936  | 883  | 823  |
|              |                 | F03   | 1303  | 1249 | 1191 | 1136 | 1081 | 1028 | 974  | 928  |
|              |                 | F04   | 1426  | 1375 | 1324 | 1277 | 1229 | 1177 | 1124 | 1078 |
|              |                 | F05   | 1518  | 1465 | 1418 | 1372 | 1328 | 1284 | 1237 | 1195 |
|              |                 | F06   | 1588  | 1539 | 1494 | 1447 | 1401 | 1358 | 1313 | 1267 |
|              |                 | F07   | 1710  | 1666 | 1632 | 1595 | 1554 | 1512 | 1473 | 1431 |
|              |                 | F08   | 1785  | 1751 | 1717 | 1675 | 1639 | 1596 | 1557 | 1516 |
|              |                 | F09   | 1845  | 1805 | 1771 | 1733 | 1695 | 1655 | 1618 | 1576 |
| *M9S800805C* | G               | F01   | 837   | 752  | 671  | 576  | 501  | 426  | 361  | 315  |
|              |                 | F02   | 1316  | 1270 | 1218 | 1166 | 1114 | 1061 | 1000 | 962  |
|              |                 | F03   | 1353  | 1323 | 1286 | 1235 | 1183 | 1131 | 1085 | 1040 |
|              |                 | F04   | 1587  | 1544 | 1506 | 1459 | 1416 | 1372 | 1323 | 1281 |
|              |                 | F05   | 1731  | 1673 | 1632 | 1587 | 1546 | 1506 | 1463 | 1421 |
|              |                 | F06   | 1794  | 1744 | 1709 | 1671 | 1632 | 1591 | 1555 | 1513 |
|              |                 | F07   | 1861  | 1805 | 1761 | 1720 | 1681 | 1642 | 1603 | 1565 |
|              |                 | F08   | 1910  | 1873 | 1839 | 1798 | 1761 | 1723 | 1686 | 1648 |
|              |                 | F09   | 2110  | 2055 | 2035 | 2003 | 1973 | 1946 | 1907 | 1890 |
| *M9S801005C* | G               | F01   | 802   | 724  | 637  | 551  | 468  | 389  | 342  | 294  |
|              |                 | F02   | 1405  | 1356 | 1308 | 1262 | 1210 | 1182 | 1155 | 1102 |
|              |                 | F03   | 1574  | 1531 | 1484 | 1440 | 1392 | 1357 | 1306 | 1256 |
|              |                 | F04   | 1619  | 1575 | 1526 | 1489 | 1446 | 1404 | 1355 | 1313 |
|              |                 | F05   | 1688  | 1641 | 1600 | 1557 | 1513 | 1477 | 1428 | 1381 |
|              |                 | F06   | 1811  | 1769 | 1730 | 1686 | 1649 | 1610 | 1572 | 1525 |
|              |                 | F07   | 1857  | 1812 | 1774 | 1733 | 1697 | 1662 | 1622 | 1586 |
|              |                 | F08   | 1892  | 1850 | 1805 | 1774 | 1735 | 1692 | 1658 | 1621 |
|              |                 | F09   | 2116  | 2073 | 2039 | 2005 | 1981 | 1945 | 1909 | 1879 |
| *M9S801205D* | G               | F01   | 851   | 774  | 692  | 615  | 535  | 470  | 411  | 359  |
|              |                 | F02   | 1677  | 1629 | 1583 | 1540 | 1498 | 1449 | 1399 | 1349 |
|              |                 | F03   | 1537  | 1489 | 1444 | 1404 | 1365 | 1322 | 1272 | 1211 |
|              |                 | F04   | 1416  | 1365 | 1315 | 1267 | 1220 | 1163 | 1106 | 1048 |
|              |                 | F05   | 1154  | 1098 | 1043 | 983  | 932  | 874  | 819  | 755  |
|              |                 | F06   | 1806  | 1764 | 1729 | 1688 | 1654 | 1615 | 1578 | 1535 |
|              |                 | F07   | 1869  | 1816 | 1773 | 1731 | 1693 | 1661 | 1629 | 1589 |
|              |                 | F08   | 1947  | 1903 | 1865 | 1833 | 1802 | 1769 | 1743 | 1708 |
|              |                 | F09   | 2107  | 2066 | 2030 | 1996 | 1963 | 1932 | 1899 | 1867 |

**HEATING AIFLOW**

| MODEL        | THERMOSTAT CALL | TAP # | EXTERNAL STATIC PRESSURE, (INCHES WATER COLUMN) |      |      |      |      |      |      |      |      |      |      |      |      | TEMP RANGE |
|--------------|-----------------|-------|---|------|------|------|------|------|------|------|------|------|------|------|------|------------|
|              |                 |       | 0.1   |      | 0.2  |      | 0.3  |      | 0.4  |      | 0.5  |      | 0.6  | 0.7  | 0.8  |            |
|              |                 |       | CFM   | RISE | CFM  | RISE | CFM  | RISE | CFM  | RISE | CFM  | RISE | CFM  | CFM  | CFM  |            |
| *M9S800403A* | W/W1            | F01^^ | 658   | N/A  | 585  | N/A  | 545  | N/A  | 495  | N/A  | 444  | N/A  | 390  | 332  | 151  | 25-55      |
|              |                 | F02^  | 749   | 40   | 697  | 42   | 652  | 45   | 607  | 49   | 554  | 53   | 509  | 459  | 406  |            |
|              |                 | F03   | 925   | 32   | 881  | 34   | 840  | 35   | 800  | 37   | 760  | 39   | 721  | 681  | 645  |            |
|              |                 | F04   | 882   | 34   | 841  | 35   | 800  | 37   | 760  | 39   | 719  | 41   | 678  | 641  | 602  |            |
| *M9S800603A* | W/W1            | F01^^ | 659   | N/A  | 599  | N/A  | 542  | N/A  | 490  | N/A  | 437  | N/A  | 383  | 320  | N/A  | 20-50      |
|              |                 | F02^  | 1268  | 35   | 1221 | 36   | 1188 | 37   | 1154 | 38   | 1122 | 40   | 1091 | 1060 | 1029 |            |
|              |                 | F03   | 1087  | 41   | 1044 | 43   | 1008 | 44   | 973  | 46   | 938  | 47   | 905  | 871  | 841  |            |
|              |                 | F04   | 1118  | 40   | 1070 | 42   | 1033 | 43   | 997  | 45   | 963  | 46   | 929  | 896  | 865  |            |
| *M9S800603B* | W/W1            | F01^^ | 720   | N/A  | 660  | N/A  | 614  | N/A  | 542  | N/A  | 468  | N/A  | 413  | 359  | 313  | 20-50      |
|              |                 | F02^  | 1289  | 34   | 1260 | 35   | 1232 | 36   | 1194 | 37   | 1161 | 38   | 1125 | 1087 | 1073 |            |
|              |                 | F03   | 1125  | 40   | 1089 | 41   | 1052 | 42   | 1013 | 44   | 973  | 46   | 947  | 909  | 863  |            |
|              |                 | F04   | 1252  | 36   | 1198 | 37   | 1153 | 39   | 1110 | 40   | 1069 | 42   | 1028 | 990  | 953  |            |
| *M9S800604B* | W/W1            | F01^^ | 764   | N/A  | 695  | N/A  | 630  | N/A  | 559  | N/A  | 485  | N/A  | 415  | 358  | N/A  | 20-50      |
|              |                 | F02^  | 1287  | 35   | 1235 | 36   | 1191 | 37   | 1147 | 39   | 1104 | 40   | 1062 | 1020 | 979  |            |
|              |                 | F03   | 1339  | 33   | 1301 | 34   | 1258 | 35   | 1217 | 37   | 1174 | 38   | 1131 | 1090 | 1048 |            |
|              |                 | F04   | 1396  | 32   | 1346 | 33   | 1298 | 34   | 1257 | 35   | 1217 | 37   | 1175 | 1135 | 1098 |            |
| *M9S800803B* | W/W1            | F01^^ | 710   | N/A  | 646  | N/A  | 580  | N/A  | 515  | N/A  | 432  | N/A  | 367  | 314  | 274  | 35-65      |
|              |                 | F02^  | 1298  | 46   | 1255 | 47   | 1216 | 49   | 1178 | 50   | 1140 | 52   | 1102 | 1067 | 1028 |            |
|              |                 | F03   | 1209  | 49   | 1166 | 51   | 1124 | 53   | 1083 | 55   | 1045 | 57   | 1005 | 964  | 923  |            |
|              |                 | F04   | 1138  | 52   | 1091 | 54   | 1045 | 57   | 1001 | 59   | 959  | 62   | 920  | 876  | 832  |            |
| *M9S800804B* | W/W1            | F01^^ | 841   | N/A  | 657  | N/A  | 595  | N/A  | 522  | N/A  | 439  | N/A  | 367  | 315  | N/A  | 35-65      |
|              |                 | F02^  | 1141  | 52   | 1089 | 54   | 1045 | 57   | 1001 | 59   | 958  | 62   | 914  | 869  | 823  |            |
|              |                 | F03   | 1311  | 45   | 1267 | 47   | 1226 | 48   | 1189 | 50   | 1150 | 52   | 1114 | 1072 | 1034 |            |
|              |                 | F04   | 1395  | 42   | 1347 | 44   | 1309 | 45   | 1270 | 47   | 1233 | 48   | 1199 | 1164 | 1125 |            |
| *M9S800804C* | W/W1            | F01^^ | 831   | N/A  | 750  | N/A  | 671  | N/A  | 588  | N/A  | 501  | N/A  | 405  | 348  | 300  | 35-65      |
|              |                 | F02^  | 1214  | 49   | 1158 | 51   | 1103 | 54   | 1045 | 57   | 989  | 60   | 936  | 883  | 823  |            |
|              |                 | F03   | 1303  | 45   | 1249 | 47   | 1191 | 50   | 1136 | 52   | 1081 | 55   | 1028 | 974  | 928  |            |
|              |                 | F04   | 1426  | 42   | 1375 | 43   | 1324 | 45   | 1277 | 46   | 1229 | 48   | 1177 | 1124 | 1078 |            |
| *M9S800805C* | W/W1            | F01^^ | 837   | N/A  | 752  | N/A  | 671  | N/A  | 576  | N/A  | 501  | N/A  | 426  | 361  | 315  | 35-65      |
|              |                 | F02^  | 1316  | 45   | 1270 | 47   | 1218 | 49   | 1166 | 51   | 1114 | 53   | 1061 | 1000 | 962  |            |
|              |                 | F03   | 1353  | 44   | 1323 | 45   | 1286 | 46   | 1235 | 48   | 1183 | 50   | 1131 | 1085 | 1040 |            |
|              |                 | F04   | 1587  | 37   | 1544 | 38   | 1506 | 39   | 1459 | 41   | 1416 | 42   | 1372 | 1323 | 1281 |            |
| *M9S801005C* | W/W1            | F01^^ | 802   | N/A  | 724  | N/A  | 637  | N/A  | 551  | N/A  | 468  | N/A  | 389  | 342  | 294  | 35-65      |
|              |                 | F02^  | 1405  | 53   | 1356 | 55   | 1308 | 57   | 1262 | 59   | 1210 | 61   | 1155 | 1102 | 1057 |            |
|              |                 | F03   | 1574  | 47   | 1531 | 48   | 1484 | 50   | 1440 | 51   | 1392 | 53   | 1357 | 1306 | 1256 |            |
|              |                 | F04   | 1619  | 46   | 1575 | 47   | 1526 | 49   | 1489 | 50   | 1446 | 51   | 1404 | 1355 | 1313 |            |
| *M9S801205D* | W/W1            | F01^^ | 851   | N/A  | 774  | N/A  | 692  | N/A  | 615  | N/A  | 535  | N/A  | 470  | 411  | 359  | 40-70      |
|              |                 | F02^  | 1677  | 53   | 1629 | 55   | 1583 | 56   | 1540 | 58   | 1498 | 59   | 1449 | 1399 | 1349 |            |
|              |                 | F03   | 1537  | 58   | 1489 | 60   | 1444 | 62   | 1404 | 63   | 1365 | 65   | 1322 | 1272 | 1211 |            |
|              |                 | F04^^ | 1416  | N/A  | 1365 | N/A  | 1315 | N/A  | 1267 | N/A  | 1220 | N/A  | 1163 | 1106 | 1048 |            |

**NOTE:**  
 ^DEFAULT & RECOMMENDED  
 ^^NOT RECOMMENDED FOR



|              |                 |       | LOW STAGE COOLING AIFLOW                        |      |      |      |      |      |      |      |
|--------------|-----------------|-------|---|------|------|------|------|------|------|------|
| MODEL        | THERMOSTAT CALL | TAP # | EXTERNAL STATIC PRESSURE, (INCHES WATER COLUMN) |      |      |      |      |      |      |      |
|              |                 |       | 0.1   | 0.2  | 0.3  | 0.4  | 0.5  | 0.6  | 0.7  | 0.8  |
|              |                 |       | CFM   | CFM  | CFM  | CFM  | CFM  | CFM  | CFM  | CFM  |
| *C9S800403A* | Y/Y1            | F01   | 712   | 663  | 610  | 559  | 514  | 462  | 395  | 337  |
|              |                 | F02   | 1120  | 1081 | 1053 | 1022 | 990  | 955  | 918  | 887  |
|              |                 | F03   | 929   | 891  | 858  | 815  | 772  | 737  | 699  | 664  |
|              |                 | F04^  | 1073  | 1031 | 1003 | 969  | 922  | 891  | 854  | 822  |
|              |                 | F05   | 1212  | 1198 | 1161 | 1138 | 1103 | 1076 | 1037 | 1007 |
|              |                 | F06   | 871   | 830  | 789  | 743  | 702  | 665  | 628  | 583  |
|              |                 | F07   | 825   | 784  | 741  | 694  | 650  | 609  | 563  | 520  |
|              |                 | F08   | 1274  | 1252 | 1220 | 1195 | 1169 | 1145 | 1110 | 1084 |
|              |                 | F09   | 1362  | 1342 | 1307 | 1273 | 1252 | 1237 | 1211 | 1185 |
| *C9S800603A* | Y/Y1            | F01   | 706   | 655  | 604  | 555  | 505  | 455  | 395  | 328  |
|              |                 | F02   | 1035  | 991  | 951  | 913  | 876  | 844  | 807  | 770  |
|              |                 | F03   | 932   | 887  | 844  | 806  | 767  | 728  | 689  | 651  |
|              |                 | F04^  | 897   | 851  | 808  | 764  | 725  | 686  | 646  | 603  |
|              |                 | F05   | 1123  | 1077 | 1041 | 1006 | 973  | 941  | 907  | 875  |
|              |                 | F06   | 1155  | 1113 | 1074 | 1039 | 1006 | 974  | 945  | 913  |
|              |                 | F07   | 1255  | 1214 | 1181 | 1147 | 1116 | 1087 | 1056 | 1028 |
|              |                 | F08   | 1388  | 1331 | 1298 | 1266 | 1235 | 1207 | 1179 | 1151 |
|              |                 | F09   | 1421  | 1380 | 1348 | 1318 | 1289 | 1262 | 1233 | 1207 |
| *C9S800804B* | Y/Y1            | F01   | 760   | 697  | 636  | 569  | 481  | 402  | 349  | 300  |
|              |                 | F02   | 1286  | 1238 | 1196 | 1157 | 1117 | 1077 | 1036 | 998  |
|              |                 | F03   | 1393  | 1348 | 1308 | 1270 | 1230 | 1196 | 1158 | 1123 |
|              |                 | F04^  | 1459  | 1414 | 1371 | 1336 | 1297 | 1264 | 1229 | 1193 |
|              |                 | F05   | 1753  | 1713 | 1677 | 1642 | 1611 | 1576 | 1549 | 1518 |
|              |                 | F06   | 1309  | 1261 | 1218 | 1182 | 1142 | 1103 | 1064 | 1025 |
|              |                 | F07   | 1580  | 1534 | 1495 | 1459 | 1429 | 1390 | 1356 | 1324 |
|              |                 | F08   | 1523  | 1483 | 1438 | 1403 | 1370 | 1336 | 1299 | 1266 |
|              |                 | F09   | 1643  | 1599 | 1562 | 1525 | 1491 | 1462 | 1431 | 1394 |
| *C9S800805C* | Y/Y1            | F01   | 1022  | 813  | 674  | 585  | 511  | 431  | 334  | 282  |
|              |                 | F02   | 1453  | 1407 | 1332 | 1259 | 1190 | 1143 | 1064 | 1003 |
|              |                 | F03   | 1176  | 1105 | 1020 | 935  | 864  | 797  | 729  | 673  |
|              |                 | F04^  | 1710  | 1660 | 1613 | 1560 | 1505 | 1424 | 1353 | 1296 |
|              |                 | F05   | 1843  | 1786 | 1747 | 1690 | 1643 | 1575 | 1497 | 1435 |
|              |                 | F06   | 1859  | 1819 | 1779 | 1734 | 1691 | 1641 | 1593 | 1520 |
|              |                 | F07   | 2028  | 1982 | 1946 | 1907 | 1861 | 1814 | 1749 | 1683 |
|              |                 | F08   | 2096  | 2045 | 2006 | 1974 | 1927 | 1882 | 1818 | 1765 |
|              |                 | F09   | 2203  | 2170 | 2138 | 2113 | 2074 | 2032 | 1990 | 1948 |
| *C9S801005C* | Y/Y1            | F01   | 956   | 777  | 675  | 587  | 468  | 377  | 324  | 296  |
|              |                 | F02   | 1460  | 1404 | 1350 | 1299 | 1251 | 1203 | 1150 | 1098 |
|              |                 | F03   | 1561  | 1499 | 1441 | 1385 | 1336 | 1289 | 1243 | 1197 |
|              |                 | F04^  | 1628  | 1571 | 1521 | 1472 | 1425 | 1380 | 1337 | 1291 |
|              |                 | F05   | 1714  | 1659 | 1611 | 1564 | 1519 | 1473 | 1432 | 1387 |
|              |                 | F06   | 1833  | 1784 | 1735 | 1688 | 1645 | 1605 | 1562 | 1520 |
|              |                 | F07   | 1899  | 1853 | 1804 | 1761 | 1720 | 1681 | 1640 | 1602 |
|              |                 | F08   | 1926  | 1894 | 1849 | 1807 | 1764 | 1720 | 1683 | 1642 |
|              |                 | F09   | 2222  | 2174 | 2132 | 2090 | 2053 | 2013 | 1976 | 1944 |

NOTE:

^ Default Speed

| MODEL        | THERMOSTAT CALL | TAP # | HIGH STAGE COOLING AIFLOW                       |      |      |      |      |      |      |      |
|--------------|-----------------|-------|---|------|------|------|------|------|------|------|
|              |                 |       | EXTERNAL STATIC PRESSURE, (INCHES WATER COLUMN) |      |      |      |      |      |      |      |
|              |                 |       | 0.1   | 0.2  | 0.3  | 0.4  | 0.5  | 0.6  | 0.7  | 0.8  |
|              |                 |       | CFM   | CFM  | CFM  | CFM  | CFM  | CFM  | CFM  | CFM  |
| *C9S800403A* | Y2              | F01   | 712   | 663  | 610  | 559  | 514  | 462  | 395  | 337  |
|              |                 | F02   | 1120  | 1081 | 1053 | 1022 | 990  | 955  | 918  | 887  |
|              |                 | F03   | 929   | 891  | 858  | 815  | 772  | 737  | 699  | 664  |
|              |                 | F04   | 1073  | 1031 | 1003 | 969  | 922  | 891  | 854  | 822  |
|              |                 | F05^  | 1212  | 1198 | 1161 | 1138 | 1103 | 1076 | 1037 | 1007 |
|              |                 | F06   | 871   | 830  | 789  | 743  | 702  | 665  | 628  | 583  |
|              |                 | F07   | 825   | 784  | 741  | 694  | 650  | 609  | 563  | 520  |
|              |                 | F08   | 1274  | 1252 | 1220 | 1195 | 1169 | 1145 | 1110 | 1084 |
|              |                 | F09   | 1362  | 1342 | 1307 | 1273 | 1252 | 1237 | 1211 | 1185 |
| *C9S800603A* | Y2              | F01   | 706   | 655  | 604  | 555  | 505  | 455  | 395  | 328  |
|              |                 | F02   | 1035  | 991  | 951  | 913  | 876  | 844  | 807  | 770  |
|              |                 | F03   | 932   | 887  | 844  | 806  | 767  | 728  | 689  | 651  |
|              |                 | F04   | 897   | 851  | 808  | 764  | 725  | 686  | 646  | 603  |
|              |                 | F05^  | 1123  | 1077 | 1041 | 1006 | 973  | 941  | 907  | 875  |
|              |                 | F06   | 1155  | 1113 | 1074 | 1039 | 1006 | 974  | 945  | 913  |
|              |                 | F07   | 1255  | 1214 | 1181 | 1147 | 1116 | 1087 | 1056 | 1028 |
|              |                 | F08   | 1388  | 1331 | 1298 | 1266 | 1235 | 1207 | 1179 | 1151 |
|              |                 | F09   | 1421  | 1380 | 1348 | 1318 | 1289 | 1262 | 1233 | 1207 |
| *C9S800804B* | Y2              | F01   | 760   | 697  | 636  | 569  | 481  | 402  | 349  | 300  |
|              |                 | F02   | 1286  | 1238 | 1196 | 1157 | 1117 | 1077 | 1036 | 998  |
|              |                 | F03   | 1393  | 1348 | 1308 | 1270 | 1230 | 1196 | 1158 | 1123 |
|              |                 | F04   | 1459  | 1414 | 1371 | 1336 | 1297 | 1264 | 1229 | 1193 |
|              |                 | F05^  | 1753  | 1713 | 1677 | 1642 | 1611 | 1576 | 1549 | 1518 |
|              |                 | F06   | 1309  | 1261 | 1218 | 1182 | 1142 | 1103 | 1064 | 1025 |
|              |                 | F07   | 1580  | 1534 | 1495 | 1459 | 1429 | 1390 | 1356 | 1324 |
|              |                 | F08   | 1523  | 1483 | 1438 | 1403 | 1370 | 1336 | 1299 | 1266 |
|              |                 | F09   | 1643  | 1599 | 1562 | 1525 | 1491 | 1462 | 1431 | 1394 |
| *C9S800805C* | Y2              | F01   | 1022  | 813  | 674  | 585  | 511  | 431  | 334  | 282  |
|              |                 | F02   | 1453  | 1407 | 1332 | 1259 | 1190 | 1143 | 1064 | 1003 |
|              |                 | F03   | 1176  | 1105 | 1020 | 935  | 864  | 797  | 729  | 673  |
|              |                 | F04   | 1710  | 1660 | 1613 | 1560 | 1505 | 1424 | 1353 | 1296 |
|              |                 | F05^  | 1843  | 1786 | 1747 | 1690 | 1643 | 1575 | 1497 | 1435 |
|              |                 | F06   | 1859  | 1819 | 1779 | 1734 | 1691 | 1641 | 1593 | 1520 |
|              |                 | F07   | 2028  | 1982 | 1946 | 1907 | 1861 | 1814 | 1749 | 1683 |
|              |                 | F08   | 2096  | 2045 | 2006 | 1974 | 1927 | 1882 | 1818 | 1765 |
|              |                 | F09   | 2203  | 2170 | 2138 | 2113 | 2074 | 2032 | 1990 | 1948 |
| *C9S801005C* | Y2              | F01   | 956   | 777  | 675  | 587  | 468  | 377  | 324  | 296  |
|              |                 | F02   | 1460  | 1404 | 1350 | 1299 | 1251 | 1203 | 1150 | 1098 |
|              |                 | F03   | 1561  | 1499 | 1441 | 1385 | 1336 | 1289 | 1243 | 1197 |
|              |                 | F04   | 1628  | 1571 | 1521 | 1472 | 1425 | 1380 | 1337 | 1291 |
|              |                 | F05^  | 1714  | 1659 | 1611 | 1564 | 1519 | 1473 | 1432 | 1387 |
|              |                 | F06   | 1833  | 1784 | 1735 | 1688 | 1645 | 1605 | 1562 | 1520 |
|              |                 | F07   | 1899  | 1853 | 1804 | 1761 | 1720 | 1681 | 1640 | 1602 |
|              |                 | F08   | 1926  | 1894 | 1849 | 1807 | 1764 | 1720 | 1683 | 1642 |
|              |                 | F09   | 2222  | 2174 | 2132 | 2090 | 2053 | 2013 | 1976 | 1944 |

**NOTE:**  
^ Default Speed

| MODEL        | THERMOSTAT CALL | TAP # | CIRCULATION AIFLOW                              |      |      |      |      |      |      |      |
|--------------|-----------------|-------|---|------|------|------|------|------|------|------|
|              |                 |       | EXTERNAL STATIC PRESSURE, (INCHES WATER COLUMN) |      |      |      |      |      |      |      |
|              |                 |       | 0.1   | 0.2  | 0.3  | 0.4  | 0.5  | 0.6  | 0.7  | 0.8  |
|              |                 |       | CFM   | CFM  | CFM  | CFM  | CFM  | CFM  | CFM  | CFM  |
| *C9S800403A* | G               | F01   | 712   | 663  | 610  | 559  | 514  | 462  | 395  | 337  |
|              |                 | F02   | 1120  | 1081 | 1053 | 1022 | 990  | 955  | 918  | 887  |
|              |                 | F03   | 929   | 891  | 858  | 815  | 772  | 737  | 699  | 664  |
|              |                 | F04   | 1073  | 1031 | 1003 | 969  | 922  | 891  | 854  | 822  |
|              |                 | F05   | 1212  | 1198 | 1161 | 1138 | 1103 | 1076 | 1037 | 1007 |
|              |                 | F06   | 871   | 830  | 789  | 743  | 702  | 665  | 628  | 583  |
|              |                 | F07   | 825   | 784  | 741  | 694  | 650  | 609  | 563  | 520  |
|              |                 | F08   | 1274  | 1252 | 1220 | 1195 | 1169 | 1145 | 1110 | 1084 |
|              |                 | F09   | 1362  | 1342 | 1307 | 1273 | 1252 | 1237 | 1211 | 1185 |
| *C9S800603A* | G               | F01   | 706   | 655  | 604  | 555  | 505  | 455  | 395  | 328  |
|              |                 | F02   | 1035  | 991  | 951  | 913  | 876  | 844  | 807  | 770  |
|              |                 | F03   | 932   | 887  | 844  | 806  | 767  | 728  | 689  | 651  |
|              |                 | F04   | 897   | 851  | 808  | 764  | 725  | 686  | 646  | 603  |
|              |                 | F05   | 1123  | 1077 | 1041 | 1006 | 973  | 941  | 907  | 875  |
|              |                 | F06   | 1155  | 1113 | 1074 | 1039 | 1006 | 974  | 945  | 913  |
|              |                 | F07   | 1255  | 1214 | 1181 | 1147 | 1116 | 1087 | 1056 | 1028 |
|              |                 | F08   | 1388  | 1331 | 1298 | 1266 | 1235 | 1207 | 1179 | 1151 |
|              |                 | F09   | 1421  | 1380 | 1348 | 1318 | 1289 | 1262 | 1233 | 1207 |
| *C9S800804B* | G               | F01   | 760   | 697  | 636  | 569  | 481  | 402  | 349  | 300  |
|              |                 | F02   | 1286  | 1238 | 1196 | 1157 | 1117 | 1077 | 1036 | 998  |
|              |                 | F03   | 1393  | 1348 | 1308 | 1270 | 1230 | 1196 | 1158 | 1123 |
|              |                 | F04   | 1459  | 1414 | 1371 | 1336 | 1297 | 1264 | 1229 | 1193 |
|              |                 | F05   | 1753  | 1713 | 1677 | 1642 | 1611 | 1576 | 1549 | 1518 |
|              |                 | F06   | 1309  | 1261 | 1218 | 1182 | 1142 | 1103 | 1064 | 1025 |
|              |                 | F07   | 1580  | 1534 | 1495 | 1459 | 1429 | 1390 | 1356 | 1324 |
|              |                 | F08   | 1523  | 1483 | 1438 | 1403 | 1370 | 1336 | 1299 | 1266 |
|              |                 | F09   | 1643  | 1599 | 1562 | 1525 | 1491 | 1462 | 1431 | 1394 |
| *C9S800805C* | G               | F01   | 1022  | 813  | 674  | 585  | 511  | 431  | 334  | 282  |
|              |                 | F02   | 1453  | 1407 | 1332 | 1259 | 1190 | 1143 | 1064 | 1003 |
|              |                 | F03   | 1176  | 1105 | 1020 | 935  | 864  | 797  | 729  | 673  |
|              |                 | F04   | 1710  | 1660 | 1613 | 1560 | 1505 | 1424 | 1353 | 1296 |
|              |                 | F05   | 1843  | 1786 | 1747 | 1690 | 1643 | 1575 | 1497 | 1435 |
|              |                 | F06   | 1859  | 1819 | 1779 | 1734 | 1691 | 1641 | 1593 | 1520 |
|              |                 | F07   | 2028  | 1982 | 1946 | 1907 | 1861 | 1814 | 1749 | 1683 |
|              |                 | F08   | 2096  | 2045 | 2006 | 1974 | 1927 | 1882 | 1818 | 1765 |
|              |                 | F09   | 2203  | 2170 | 2138 | 2113 | 2074 | 2032 | 1990 | 1948 |
| *C9S801005C* | G               | F01   | 956   | 777  | 675  | 587  | 468  | 377  | 324  | 296  |
|              |                 | F02   | 1460  | 1404 | 1350 | 1299 | 1251 | 1203 | 1150 | 1098 |
|              |                 | F03   | 1561  | 1499 | 1441 | 1385 | 1336 | 1289 | 1243 | 1197 |
|              |                 | F04   | 1628  | 1571 | 1521 | 1472 | 1425 | 1380 | 1337 | 1291 |
|              |                 | F05   | 1714  | 1659 | 1611 | 1564 | 1519 | 1473 | 1432 | 1387 |
|              |                 | F06   | 1833  | 1784 | 1735 | 1688 | 1645 | 1605 | 1562 | 1520 |
|              |                 | F07   | 1899  | 1853 | 1804 | 1761 | 1720 | 1681 | 1640 | 1602 |
|              |                 | F08   | 1926  | 1894 | 1849 | 1807 | 1764 | 1720 | 1683 | 1642 |
|              |                 | F09   | 2222  | 2174 | 2132 | 2090 | 2053 | 2013 | 1976 | 1944 |

**HEATING AIFLOW**

| MODEL        | THERMOSTAT CALL | TAP # | EXTERNAL STATIC PRESSURE, (INCHES WATER COLUMN) |      |      |      |      |      |      |      |      |      |      |      |      | TEMP RANGE |
|--------------|-----------------|-------|---|------|------|------|------|------|------|------|------|------|------|------|------|------------|
|              |                 |       | 0.1   |      | 0.2  |      | 0.3  |      | 0.4  |      | 0.5  |      | 0.6  | 0.7  | 0.8  |            |
|              |                 |       | CFM   | RISE | CFM  | RISE | CFM  | RISE | CFM  | RISE | CFM  | RISE | CFM  | CFM  | CFM  |            |
| *C9S800403A* | W/W1            | F01^^ | 712   | N/A  | 663  | N/A  | 610  | N/A  | 559  | N/A  | 514  | N/A  | 462  | 395  | 337  | 25-55      |
|              |                 | F02^  | 1120  | 26   | 1081 | 27   | 1053 | 28   | 1022 | 29   | 990  | 30   | 955  | 918  | 887  |            |
|              |                 | F03   | 929   | 32   | 891  | 33   | 858  | 35   | 815  | 36   | 772  | 38   | 737  | 699  | 664  |            |
|              |                 | F04   | 1073  | 28   | 1031 | 29   | 1003 | 30   | 969  | 31   | 922  | 32   | 891  | 854  | 822  |            |
| *C9S800603A* | W/W1            | F01^^ | 706   | N/A  | 655  | N/A  | 604  | N/A  | 555  | N/A  | 505  | N/A  | 455  | 395  | 328  | 30-60      |
|              |                 | F02^  | 1035  | 43   | 991  | 45   | 951  | 47   | 913  | 49   | 876  | 51   | 844  | 807  | 770  |            |
|              |                 | F03   | 932   | 48   | 887  | 50   | 844  | 53   | 806  | 55   | 767  | 58   | 728  | 689  | 651  |            |
|              |                 | F04^^ | 897   | N/A  | 851  | N/A  | 808  | N/A  | 764  | N/A  | 725  | N/A  | 686  | 646  | 603  |            |
| *C9S800804B* | W/W1            | F01^^ | 760   | N/A  | 697  | N/A  | 636  | N/A  | 569  | N/A  | 481  | N/A  | 402  | 349  | 300  | 35-65      |
|              |                 | F02^  | 1286  | 46   | 1238 | 48   | 1196 | 50   | 1157 | 51   | 1117 | 53   | 1077 | 1036 | 998  |            |
|              |                 | F03   | 1393  | 43   | 1348 | 44   | 1308 | 45   | 1270 | 47   | 1230 | 48   | 1196 | 1158 | 1123 |            |
|              |                 | F04   | 1459  | 41   | 1414 | 42   | 1371 | 43   | 1336 | 44   | 1297 | 46   | 1264 | 1229 | 1193 |            |
| *C9S800805C* | W/W1            | F01^^ | 1022  | N/A  | 813  | N/A  | 674  | N/A  | 585  | N/A  | 511  | N/A  | 431  | 334  | 282  | 35-65      |
|              |                 | F02^  | 1453  | 41   | 1407 | 42   | 1332 | 45   | 1259 | 47   | 1190 | 50   | 1143 | 1064 | 1003 |            |
|              |                 | F03^^ | 1176  | N/A  | 1105 | N/A  | 1020 | N/A  | 935  | N/A  | 864  | N/A  | 797  | 729  | 673  |            |
|              |                 | F04   | 1710  | 35   | 1660 | 36   | 1613 | 37   | 1560 | 38   | 1505 | 39   | 1424 | 1353 | 1296 |            |
| *C9S801005C* | W/W1            | F01^^ | 956   | N/A  | 777  | N/A  | 675  | N/A  | 587  | N/A  | 468  | N/A  | 377  | 324  | 296  | 40-70      |
|              |                 | F02^  | 1460  | 51   | 1404 | 53   | 1350 | 55   | 1299 | 57   | 1251 | 59   | 1203 | 1150 | 1098 |            |
|              |                 | F03   | 1561  | 47   | 1499 | 49   | 1441 | 51   | 1385 | 53   | 1336 | 55   | 1289 | 1243 | 1197 |            |
|              |                 | F04   | 1628  | 46   | 1571 | 47   | 1521 | 49   | 1472 | 50   | 1425 | 52   | 1380 | 1337 | 1291 |            |

**NOTE:**  
 ^DEFAULT & RECOMMENDED  
 ^^NOT RECOMMENDED FOR H



## 1 STAGE STATUS CODES

| Menu Description                               | LED Display  |                         | Notes   |
|--|--------------|-------------------------|---|
|  | Main Menu    | Option Menu             |   |
| Active Alaram menu                             | <i>E r r</i> | <i>Exx</i>              | ( xx: code numbers )  |
| Last 6 Faults                                  | <i>L6F</i>   | <i>Exx</i>              | ( xx: code numbers )  |
| Code Release Number                            | <i>Cr</i>    | CR Number               |   |
| Reset to Factory Default                       | <i>r Fd</i>  | <b>yes, no</b>          |   |
| Blower Speed for Continous Fan Mode            | <i>F5d</i>   | <i>Fxx</i>              | ( xx: Blower Speed Number F01, F02.. )  |
| Blower Speed for 1st Stage Compressor Mode     | <i>FC1</i>   | <i>Fxx</i>              | ( xx: Blower Speed Number F01, F02.. )  |
| Blower Speed for 2nd Stage Compressor Mode     | <i>FC2</i>   | <i>Fxx</i>              | ( xx: Blower Speed Number F01, F02.. )  |
| Cool On Delay                                  | <i>Cnd</i>   | Delay, Seconds          | Default set at 7 Secs, Adjustments can be made in 7 Secs increments from 0 to 35 Secs     |
| Cool Off Delay                                 | <i>CO d</i>  | Delay, Seconds          | Default set at 65 Secs, Adjustments can be made in 5 Secs increments from 0 to 120 Secs   |
| Blower Speed for Gas Heat Mode                 | <i>gFF</i>   | <i>Fxx</i>              | ( xx: Blower Speed Number F01, F02.. )  |
| Gas Heat On Delay                              | <i>gnd</i>   | Delay, Seconds          | Default set at 30 Secs, Adjustments can be made in 5 Secs increments from 5 to 30 Secs    |
| Gas heat Off Delay                             | <i>gFd</i>   | Delay, Seconds          | Default set at 90 Secs, Adjustments can be made in 30 Secs increments from 30 to 180 Secs |
| Automatic Heat Staging - For Two Stage Control | <i>A-E</i>   | no, 10, 20, 30, 60, Aut | Refer to Section " CHANGING HEATING MODE SETTING"   |

| Mode                            | Main Menu  |
|---------------------------------|------------|
| Idle                            | <i>IDL</i> |
| Continuous Fan                  | <i>FAN</i> |
| Compressor Cooling, Low Stage   | <i>1RC</i> |
| Compressor Cooling, High Stage  | <i>2RC</i> |
| Gas heat - Single Stage Control | <i>GH</i>  |
| OEM test Mode                   | <i>EOL</i> |

## 1 STAGE TROUBLESHOOTING CODES

| TROUBLESHOOTING CHART  |            |  |   |
|--|------------|--|---|
| Symptom  | LED Status | Fault Description  | Corrective Actions  |
| Normal operation   | LED        | Normal operation   | None  |
| Furnace fails to operate   | EE0        | Furnace lockout due to an excessive number of ignition "retries" (3 total)<br>Failure to establish flame<br>Loss of flame after establishment  | Locate and correct gas interruption<br>Replace or realign igniter<br>Check flame sense signal, clean sensor if coated or oxidized<br>Check flue piping for blockage, proper length, elbows, and termination<br>Verify proper induced draft blower performance                                       |
| Furnace fails to operate   | EE1        | Pressure switch circuit is closed at start of heating cycle<br>Pressure switch contacts sticking<br>Short in pressure switch circuit wiring  | Replace low stage pressure switch<br>Repair short in wiring   |
| Induced draft blower runs continuously with no furnace operation                     | EE2        | Pressure switch circuit is not closed<br>Pressure switch hose blocked/pinched, or connected improperly<br>Blocked flue and/or inlet air pipe, blocked drain system or weak induced draft blower<br>Incorrect pressure switch set point or malfunctioning switch contacts<br>Loose or improperly connected wiring | Inspect pressure switch hose, repair/replace if necessary<br>Inspect flue piping for blockage, proper length, elbows, and termination<br>Check induced draft blower performance, correct as necessary<br>Check pressure switch operation, replace as needed<br>Tighten or correct wiring connection |
| Circulator blower runs continuously<br>No furnace operation                          | EE3        | Primary limit circuit is open<br>Insufficient conditioned air over the heat exchanger<br>Blocked filters, restrictive ductwork, improper circulator blower speed, or failed circulator blower motor<br>Loose or improperly connected wiring in high limit circuit  | Check filters and ductwork for blockage<br>Clean filters or remove obstruction<br>Check circulator blower speed and performance<br>Correct speed or replace blower motor if necessary<br>Tighten or correct wiring connection   |
| Induced draft blower and circulator blower runs continuously<br>No furnace operation | EE4        | Flame sensed with no call for heat<br>Short to ground in flame sense circuit<br>Lingering burner flame<br>Slow closing gas valve   | Correct short at flame sensor or in flame sensor wiring<br>Check for lingering or lazy flame<br>Verify proper operation of gas valve  |
| No furnace operation   | EE5        | Open fuse<br>Short in low voltage wiring   | Replace fuse<br>Locate and correct short in low voltage wiring  |

### TO VIEW & CLEAR FAULT CODES

- Press either the Left or Right switch until L E F is displayed.
- Press the center switch to view stored faults.
- Press and hold the center switch for 5 to 30 seconds.
- All stored faults will be erased, and the display will flash - - - three times and return to L E F.

## 1 STAGE TROUBLESHOOTING CODES


| TROUBLESHOOTING CHART   |            |  |   |
|---|------------|--|---|
| Symptom   | LED Status | Fault Description  | Corrective Actions  |
| Normal furnace operation  | EE6        | Flame sense micro amp signal is minimal<br>Flame sensor is coated/oxidized<br>Flame sensor incorrectly positioned in burner fame<br>Lazy burner flame due to improper gas pressure or combustion air | Clean flame sensor if coated or oxidized Inspect for proper flame sensor alignment<br><br>Compare current gas pressure to rating plate and adjust as needed   |
| Furnace fails to operate  | EEL        | Problem with igniter circuit<br>Improperly connected or shorted igniter<br>Poor unit ground<br>Igniter relay fault on integrated control module  | Check and correct wiring from integrated control module to igniter<br>Diagnose and replace shorted igniter as needed Verify and correct unit ground wiring if needed<br>Check igniter output from control, replace if necessary |
| Furnace fails to operate  | EEA        | Polarity of 115 volt AC is reversed<br>Poor unit ground  | Correct polarity, check and correct wiring if necessary<br>Verify proper ground, correct if necessary   |
| Furnace fails to operate  | EEb        | Gas valve is not energized when it should be<br>External Gas Valve Error   | Check wiring in gas valve circuit<br>Replace integrated control board   |
| Furnace fails to operate  | EEc        | Gas valve is energized when it should not be<br>Internal gas valve error   | Check wiring in gas valve circuit<br>Replace integrated control board   |
| Furnace fails to operate.<br>Integrated control module LED display provides no signal | None       | No 115 power to furnace or no 24 volt power to integrated control module.<br>Blown fuse or tripped circuit breaker<br>Integrated control module is non- functional                                   | Restore high voltage power to furnace and integrated control module.<br>Correct condition which caused fuse to open, replace fuse<br>Replace non-functional integrated control module.  |
| Furnace fails to operate  | E 10       | Grounding fault<br>Poor neutral connection   | Verify neutral wire connection to furnace & continuity to ground source   |
| Furnace fails to operate  | E 11       | Open roll out switch   | Check for correct gas pressure Check for correct burner alignment<br>Check for and correct burner restriction   |
| Furnace fails to operate  | EE n       | Ignitor Open   | Check for Ignitor wiring.<br>Replace Damaged Ignitor  |
| Furnace fails to operate  | EEJ        | Inducer relay Error  | Replace integrated control board  |
| Twinning feature not working  | EEH        | TWIN Error   | Check for wiring connections.<br>Replace integrated control board   |
| Furnace fails to operate  | EEE        | Internal Faults or IRQ Loss in Control Board   | Replace integrated control board  |



# WIRING DIAGRAM



**HIGH VOLTAGE!**  
Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.

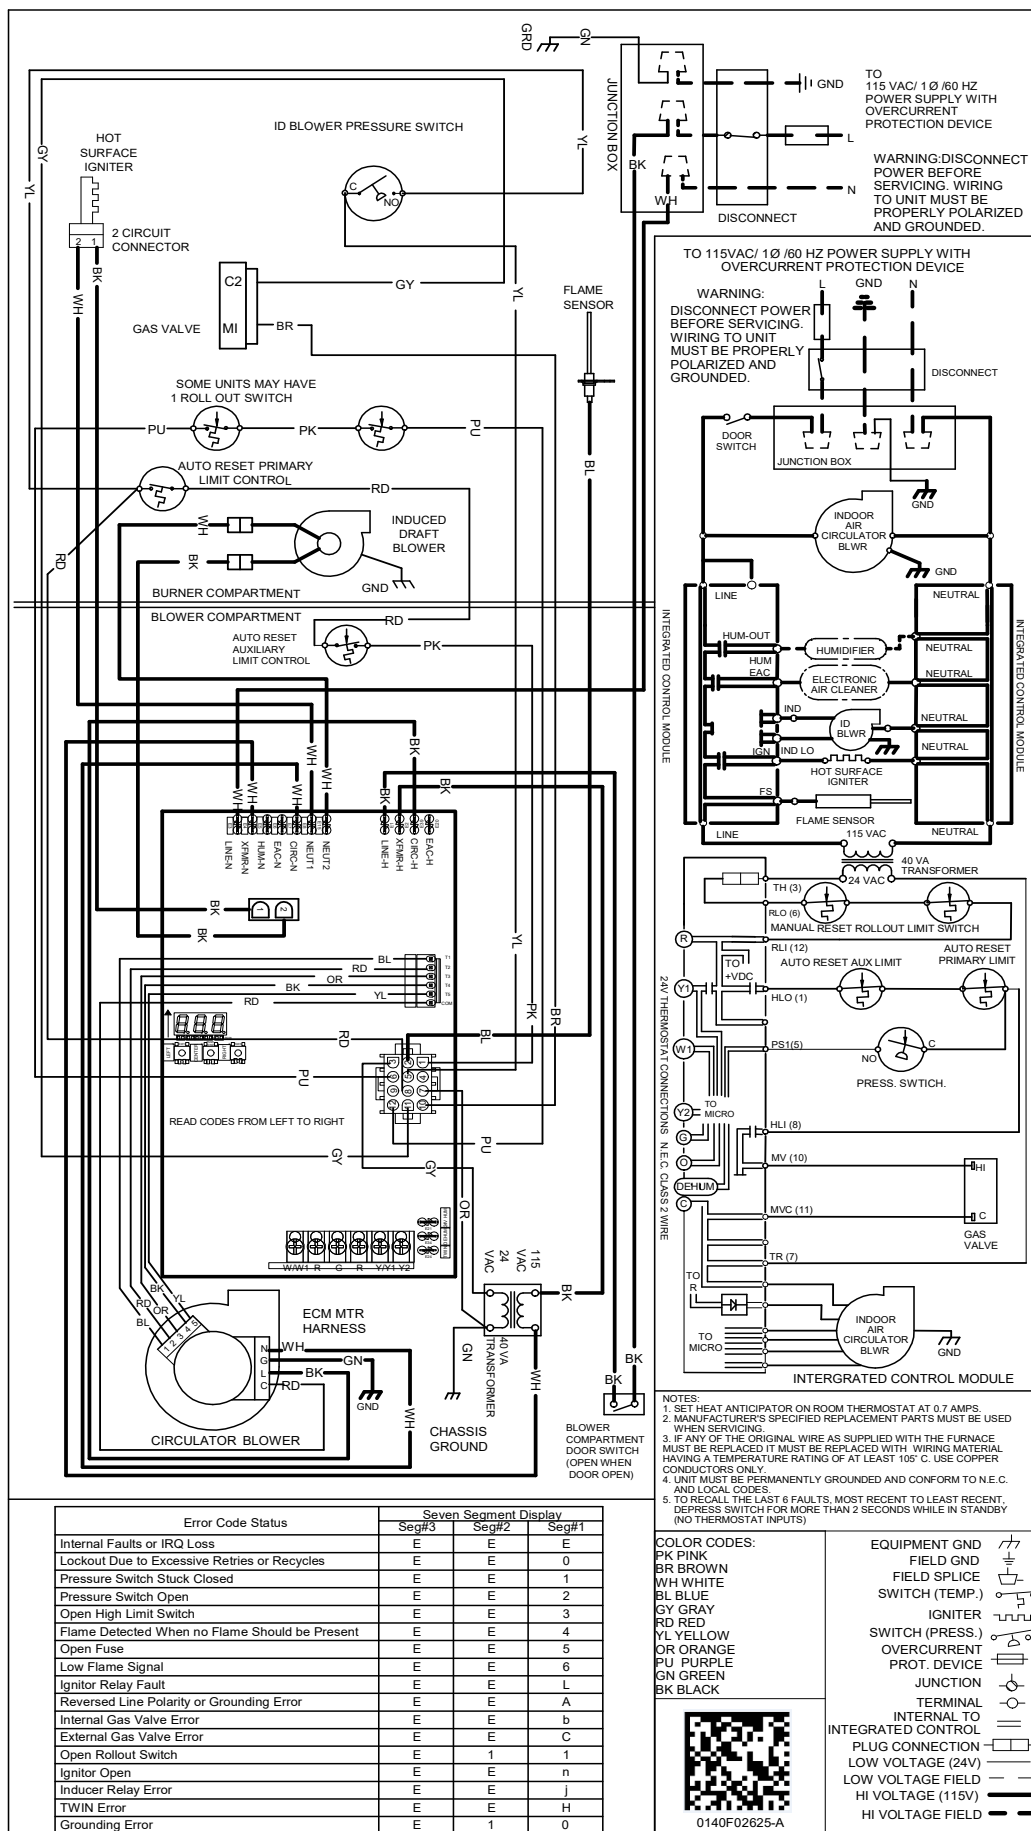

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

## MAINTENANCE



### WARNING

TO AVOID ELECTRIC SHOCK, INJURY OR DEATH, DISCONNECT ELECTRICAL POWER BEFORE PERFORMING ANY MAINTENANCE. IF YOU MUST HANDLE THE IGNITER, HANDLE WITH CARE. TOUCHING THE IGNITER ELEMENT WITH BARE FINGERS, ROUGH HANDLING OR VIBRATION COULD DAMAGE THE IGNITER RESULTING IN PREMATURE FAILURE. ONLY A QUALIFIED SERVICER SHOULD EVER HANDLE THE IGNITER.



### ANNUAL INSPECTION

The furnace should be inspected by a qualified installer, or service agency at least once per year. This check should be performed at the beginning of the heating season. This will ensure that all furnace components are in proper working order and that the heating system functions appropriately. Pay particular attention to the following items. Repair or service as necessary.

- Flue pipe system. Check for blockage and/or leakage. Check the outside termination and the connections at and internal to the furnace.
- Heat exchanger. Check for corrosion and/or buildup within the heat exchanger passageways.
- Burners. Check for proper ignition, burner flame, and flame signal.
- Wiring. Check electrical connections for tightness and/or corrosion. Check wires for damage.
- Filters.

### FILTERS



### CAUTION

TO ENSURE PROPER UNIT PERFORMANCE, ADHERE TO THE FILTER SIZES GIVEN IN THE RECOMMENDED MINIMUM FILTER SIZE TABLE OR SPECIFICATION SHEET APPLICABLE TO YOUR MODEL.

### FILTER MAINTENANCE

Improper filter maintenance is the most common cause of inadequate heating or cooling performance. Filters should be cleaned (permanent) or replaced (disposable) as required.

### FILTER REMOVAL

Depending on the installation, differing filter arrangements can be applied. Filters can be installed in either the central return register or a side panel external filter rack (upflow only). A media air filter or electronic air cleaner can be used as an alternate filter. Follow the filter sizes given in the Recommended Minimum Filter size table to ensure proper unit performance.

To remove filters from an external filter rack in an upright up-flow installation, follow the directions provided with external filter rack kit.

### HORIZONTAL UNIT FILTER REMOVAL

Filters in horizontal installations are located in the central return register or the ductwork near the furnace.

To remove:

1. Turn OFF electrical power to furnace.
2. Remove filter(s) from the central return register or ductwork.
3. Replace filter(s) by reversing the procedure for removal.
4. Turn ON electrical power to furnace.

### MEDIA AIR FILTER OR ELECTRONIC AIR CLEANER REMOVAL

Follow the manufacturer's directions for service.

### BURNERS

Visually inspect the burner flames periodically during the heating season. Turn on the furnace at the thermostat and allow several minutes for flames to stabilize, since any dislodged dust will alter the flames normal appearance. Flames should be stable, quiet, soft, and blue (dust may cause orange tips but they must not be yellow). They should extend directly outward from the burners without curling, floating, or lifting off. Flames must not impinge on the sides of the heat exchanger firing tubes.

### INDUCED DRAFT AND CIRCULATOR BLOWERS

The bearings in the induced draft blower and circulator blower motors are permanently lubricated by the manufacturer. No further lubrication is required. Check motor windings for accumulation of dust which may cause overheating. Clean as necessary.

### FLAME SENSOR (QUALIFIED SERVICER ONLY)

Under some conditions, the fuel or air supply can create a nearly invisible coating on the flame sensor. This coating acts as an insulator causing a drop in the flame sense signal. If the flame sense signal drops too low the furnace will not sense flame and will lock out. The flame sensor should be carefully cleaned by a qualified servicer using steel wool. Following cleaning, the flame sense signal should be as indicated in the Specifications Sheet.

### FLUE PASSAGES (QUALIFIED SERVICER ONLY)

The heat exchanger flue passageways should be inspected at the beginning of each heating season.

## ***BEFORE LEAVING AN INSTALLATION***

- Cycle the furnace with the thermostat at least three times. Verify cooling and fan only operation.
- Review the Owner's Manual with the homeowner and discuss proper furnace operation and maintenance.
- Leave literature packet near furnace.

## ***REPAIR AND REPLACEMENT PARTS***

- When ordering any of the listed functional parts, be sure to provide the furnace model, manufacturing, and serial numbers with the order.
- Although only functional parts are shown in the parts list, all sheet metal parts, doors, etc. may be ordered by description.
- Parts are available from your distributor.

### **FUNCTIONAL PARTS LIST**

|                      |                           |
|----------------------|---------------------------|
| Gas Valve            | Blower Motor              |
| Gas Manifold         | Blower Wheel              |
| Natural Gas Orifice  | Blower Mounting Bracket   |
| Propane Gas Orifice  | Blower Cutoff             |
| Igniter              | Blower Housing            |
| Flame Sensor         | Inductor                  |
| Rollout Limit Switch | Heat Exchanger            |
| Primary Limit Switch | Auxiliary Limit Switch    |
| Pressure Switch      | Integrated Control Module |
| Induced Draft Blower | Transformer               |
| Door Switch          |                           |

| Furnace   |               |             |             |
|---|---------------|-------------|-------------|
|   | Model Number  | _____       |             |
|   | Serial Number | _____       |             |
| <b>ELECTRICAL</b>   |               |             |             |
| Line Voltage (Measure <b>L1 to N</b> and <b>N to Ground</b> Voltage)                                    | L - N         | _____       |             |
|   | N - G         | _____       |             |
| Secondary Voltage (Measure Transformer Output Voltage)  | R - C         | _____       |             |
| Blower Amps   |               | _____       |             |
| <b>BLOWER EXTERNAL STATIC PRESSURE</b>  |               |             |             |
| Return Air Static Pressure  |               | _____       | IN. W.C.    |
| Supply Air Static Pressure  |               | _____       | IN. W.C.    |
| Total External Static Pressure (Ignoring +/- from the reading above, add total here)                    |               | _____       | IN. W.C.    |
| <b>TEMPERATURES</b>   |               |             |             |
| Return Air Temperature (Dry bulb / Wet bulb)  |               | _____ DB °F | _____ WB °F |
| Cooling Supply Air Temperature (Dry bulb / Wet bulb)  |               | _____ DB °F | _____ WB °F |
| Heating Supply Air Temperature  |               | _____ DB °F |             |
| Temperature Rise  |               | _____ DB °F |             |
| Delta T (Difference between Supply and Return Temperatures)   |               | _____ DB °F |             |
| <b>GAS PRESSURES</b>  |               |             |             |
| Gas Inlet Pressure  |               | _____       | IN. W.C.    |
| Gas Manifold Pressure (Low Fire)  |               | _____       | IN. W.C.    |
| Gas Manifold Pressure (High Fire)   |               | _____       | IN. W.C.    |
| Gas Type (NG) = Natural Gas / (LP) = Liquid Propane   |               | _____       |             |
| <b>Additional Checks</b>  |               |             |             |
| Check wire routings for any rubbing   |               | _____       |             |
| Check for kinked pressure switch tubing.  |               | _____       |             |
| Check flue elbow for alignment and clamp tightness.   |               | _____       |             |
| Check screw tightness on blower wheel.  |               | _____       |             |
| Check factory wiring and wire connections.  |               | _____       |             |
| Check product for proper clearances as noted by installtion instructions                                |               | _____       |             |
| °F to °C formula: (°F - 32) divided by 1.8 = °C      °C to °F formula: (°C multiplied by 1.8) + 32 = °F |               |             |             |



**THIS PAGE IS LEFT INTENTIONALLY BLANK.**

**THIS PAGE IS LEFT INTENTIONALLY BLANK.**

**THIS PAGE IS LEFT INTENTIONALLY BLANK.**

### CUSTOMER FEEDBACK

We are very interested in all product comments.

Please fill out the feedback on one of the following links:

Goodman® Brand Products: (<http://www.goodmanmfg.com/about/contact-us>).

Amana® Brand Products: (<http://www.amana-hac.com/about-us/contact-us>).

You can also scan the QR code on the right for the product brand you purchased to be directed to the feedback page.



GOODMAN® BRAND



AMANA® BRAND

### Product Registration

Thank you for your recent purchase. Though not required to get the protection of the standard warranty, registering your product is a relatively short process, and entitles you to additional warranty protection, except that failure by California and Quebec residents to register their product does not diminish their warranty rights.

For Product Registration please register by following this link:

Goodman® Brand Products: (<https://www.goodmanmfg.com/product-registration>).

Amana® Brand Products: (<http://www.amana-hac.com/product-registration>).

You can also scan the QR code on the right to be directed to the Product Registration Page.



GOODMAN® BRAND



AMANA® BRAND

Our continuing commitment to quality products may mean a change in specifications without notice.

© 2021 Goodman Manufacturing Company, L.P.

19001 Kermier Rd., Waller, TX 77484

[www.goodmanmfg.com](http://www.goodmanmfg.com) • [www.amana-hac.com](http://www.amana-hac.com)